



XLED 3019 DMX CHART

PR-8127

Standard mode	Extended mode	Function	DMX	Description
1	1	Strobe	000-007	No Strobe
			008-127	Pulse from slow to fast
			128-135	No Strobe
			136-177	Pulse Strobe 1
			178-185	No Strobe
			186-227	Pulse Strobe 2
			228-235	No Strobe
			236-249	Random Strobe
			250-255	No Strobe
2	2	Dimmer	000-255	Linear Dimming from dark to Bright
3	3	Color Temp	0	No
			001-255	Linear Color Temp adjustment from low to high (2700K – 10000K)
	4	Color effect	000-007	No
			008-231	32 colors
			232-255	Rainbow effect from fast to slow
4	5	Area 1 Red	000-255	Linear adjustment in Red from light to dark of Area 1
	9	Area 2 Red	000-255	Linear adjustment in Red from light to dark of Area 2
5	6	Area 1 Green	000-255	Linear adjustment in Green from light to dark of Area 1
	10	Area 2 Green	000-255	Linear adjustment in Green from light to dark of Area 2
6	7	Area 1 Blue	000-255	Linear adjustment in Blue from light to dark of Area 1
	11	Area 2 Blue	000-255	Linear adjustment in Blue from light to dark of Area 2
7	8	Area 1 White	000-255	Linear adjustment in White from light to dark of Area 1
	12	Area 2 White	000-255	Linear adjustment in White from light to dark of Area 2
8	13	Zoom	000-255	Linear Zooming (0%~100%)
	14	Zoom Fine	000-255	Zooming in 16 bit precision
9	15	Pan	000-255	Pan (0°~540°)
	16	Pan Fine	000-255	Pan in 16 bit Precision
10	17	Tilt	000-255	Tilt (0°~270°)
	18	Tilt Fine	000-255	Tilt in 16 bit Precision
11	19	Pan & Tilt Speeds	000-255	Pan and Tilt Speeds from fast to slow
12	20	Control Function	000-049	Reserved
			050-255	Reset (Reset after 2 seconds)