


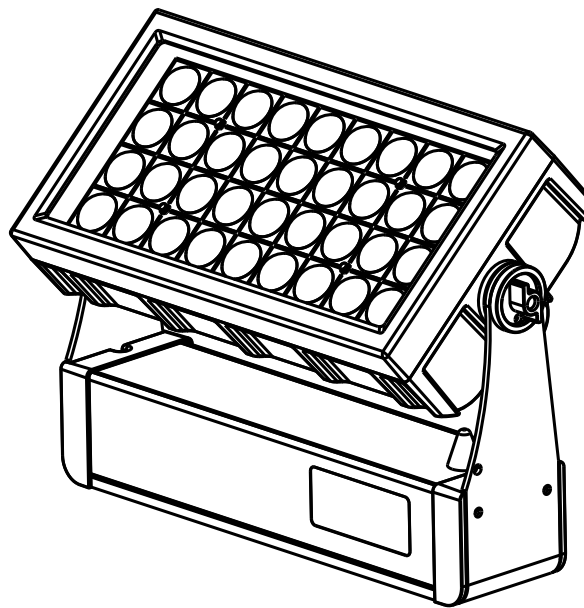

Tour-CYC 540 RGBW Zoom

led22475

DMX-Channels



DMX-Modi: 8

Channels: 3 / 4 / 4 / 5 / 15 / 20 / 21 / 37

DMX-Chart V201801-001

Änderungen sind ohne Ankündigung möglich.
Changes are possible without prior notice.

3Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Dimmer	000	-	255	0%-100%	Dimmer
3	Colour Macro (override RGBW)	000	-	005	Colour OFF	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118		125	Cold White	
		126		127	Colour jumping stop	
		128		191	Colour jumping Speed slow->fast/Colour1->12	
		192		255	Colour fading Speed slow->fast/Colour1->12	

4Ch mode1						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Dimmer	000	-	255	0%-100%	Dimmer
3	Strobe	000	-	255	Strobe Open	Strobe
		006	-	010	Strobe Close	
		011	-	250	Strobe slow->fast<1Hz-20Hz	
		251	-	255	Strobe Open	
4	Colour Macro (override RGBW)	000	-	005	Colour OFF	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118		125	Cold White	
		126		127	Colour jumping stop	
		128		191	Colour jumping Speed slow->fast/Colour1->12	
		192		255	Colour fading Speed slow->fast/Colour1->12	

4Ch mode2						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Red	000	-	255	Red 0%-100%	Red
3	Green	000	-	255	Green 0%-100%	Green
4	Blue	000	-	255	Blue 0%-100%	Blue

5Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Red	000	-	255	Red 0%-100%	Red
3	Green	000	-	255	Green 0%-100%	Green
4	Blue	000	-	255	Blue 0%-100%	Blue
5	White	000	-	255	White 0%-100%	White

15Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Dimmer	000	-	255	Red 0%-100%	Dimmer
3	Strobe functions	000	-	005	Strobe open	Multifunctional -strobe
		006	-	010	Strobe closed	
		011	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
5	Red	000	-	255	Red 0%-100%	Red
5	Green	000	-	255	Green 0%-100%	Green
6	Blue	000	-	255	Blue 0%-100%	Blue
7	White	000	-	255	White 0%-100%	White
8	Colour Macro (override RGBW)	000	-	005	Colour OFF	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour jumping stop	
		128	-	191	Colour jumping Speed slow->fast/Colour1->12	
		192	-	255	Colour fading Speed slow->fast/Colour1->12	
9	Dimmer Curve	000	-	005	No function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	

10	Device settings	000	-	005	No function	Device settings
		006	-	055	Dimmer Response LED (Hold 3s)	
		056	-	105	Dimmer Response Halogen (Hold 5s)	
		106	-	155	Setting Fan High Mode (Hold 3s)	
		156	-	205	Setting Fan Auto Mode (Hold 3s)	
		206	-	255	Reset All Function(Hold 5s)	
11	Ground Colour Dimmer	000	-	255	Ground Colour Dimmer 0%-100%	Ground Colour Dimmer
12	Ground Colour Strobe	000	-	255	Ground Colour Strobe slow->fast<1-20HZ	Ground Colour Strobe
13	Ground Colour Red	000	-	255	Ground Colour Red 0%-100%	Ground Colour Red
14	Ground Colour Green	000	-	255	Ground Colour Green 0%-100%	Ground Colour Green
15	Ground Colour Blue	000	-	255	Ground Colour Blue 0%-100%	Ground Colour Blue

20Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Red1	000	-	255	Red1 0%-100%	Red1
3	Green1	000	-	255	Green1 0%-100%	Green1
4	Blue1	000	-	255	Blue1 0%-100%	Blue1
5	White1	000	-	255	White1 0%-100%	White1
6	Red2	000	-	255	Red2 0%-100%	Red2
7	Green2	000	-	255	Green2 0%-100%	Green2
8	Blue2	000	-	255	Blue2 0%-100%	Blue2
9	White2	000	-	255	White2 0%-100%	White2
10	Red3	000	-	255	Red3 0%-100%	Red3
11	Green3	000	-	255	Green3 0%-100%	Green3
12	Blue3	000	-	255	Blue3 0%-100%	Blue3
13	White3	000	-	255	White3 0%-100%	White3
14	Red4	000	-	255	Red4 0%-100%	Red4
15	Green4	000	-	255	Green4 0%-100%	Green4
16	Blue4	000	-	255	Blue4 0%-100%	Blue4
17	White4	000	-	255	White4 0%-100%	White4
18	Ground Colour Red	000	-	255	Ground Colour Red 0% -100%	Ground Colour Red
19	Ground Colour Green	000	-	255	Ground Colour Green 0% -100%	Ground Colour Green
20	Ground Colour Blue	000	-	255	Ground Colour Blue 0% -100%	Ground Colour Blue

21Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Zoom speed	000	-	255	Fast->Slow	Zoom speed
3	Dimmer	000	-	255	0%-100%	Dimmer
4	Strobe functions	000	-	005	Strobe open	Green
		006	-	010	Strobe closed	Multifunctional -strobe
		011	-	033	Plus Random, slow->fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
5	Red	000	-	255	Red 0%-100%	Red
6	Green	000	-	255	Green 0%-100%	Green
7	Blue	000	-	255	Blue 0%-100%	Blue
8	White	000	-	255	White 0%-100%	White
9	Colour Macro (override RGBW)	000	-	005	Colour OFF	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour jumping stop	
		128	-	191	Colour jumping Speed slow->fast/Colour1->12	
		192	-	255	Colour fading Speed slow->fast/Colour1->12	
10	Rainbow	000	-	006	Rainbow off	Rainbow effect
		006	-	021	Rainbow1	
		022	-	037	Rainbow2	
		038	-	053	Rainbow3	
		054	-	069	Rainbow4	
		070	-	085	Rainbow5	
		086	-	101	Rainbow6	
		102	-	117	Rainbow7	
		118	-	133	Rainbow8	
		134	-	149	Rainbow9	
		150	-	165	Rainbow10	
		166	-	181	Rainbow11	
		182	-	197	Rainbow12	
		198	-	213	Rainbow13	
		214	-	229	Rainbow14	
		230	-	255	Rainbow15	

11	Auto	000	-	005	No function	AUTO Program
		006	-	030	Auto Program1	
		031	-	055	Auto Program2	
		056	-	080	Auto Program3	
		081	-	105	Auto Program4	
		106	-	130	Auto Program5	
		131	-	155	Auto Program6	
		156	-	180	Auto Program7	
		181	-	205	Auto Program8	
		206	-	230	Auto Program9	
		231	-	255	Auto Program10	
12	Speed	000	-	255	Auto program speed slow->fast	Speed
13	Fade	000	-	255	Auto Fade	Fade
14	Dimmer Curve	000	-	005	No function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	
15	Device settings	000	-	005	No function	Device settings
		006	-	055	Dimmer Response LED (Hold 3s)	
		056	-	105	Dimmer Response Halogen (Hold 5s)	
		106	-	155	Setting Fan High Mode (Hold 3s)	
		156	-	205	Setting Fan Auto Mode (Hold 3s)	
		206	-	255	Reset All Function(Hold 5s)	
16	Ground Colour Dimmer	000	-	255	Ground Colour Dimmer 0%-100%	Ground Colour Dimmer
17	Ground Colour Strobe	000	-	255	Ground Colour Strobe slow->fast<1-20HZ	Ground Colour Strobe
18	Ground Colour Red	000	-	255	Ground Colour Red 0%-100%	Ground Colour Red
19	Ground Colour Green	000	-	255	Ground Colour Green 0%-100%	Ground Colour Green
20	Ground Colour Blue	000	-	255	Ground Colour Blue 0%-100%	Ground Colour Blue
21	Ground Colour Macro	000	-	005	Colour OFF	Ground Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118		125	Cold White	
		126		127	Colour jumping stop	
		128		191	Colour jumping Speed slow->fast/Colour1->12	
		192		255	Colour fading Speed slow->fast/Colour1->12	

37Ch mode						
Ch.	Function	Values				Sub-group
1	Zoom	000	-	255	0%-100%	Zoom
2	Zoom speed	000	-	255	Fast->Slow	Zoom speed
3	Dimmer	000	-	255	0%-100%	Dimmer
4	Strobe functions	000	-	005	Strobe open	Green
		006	-	010	Strobe closed	Multifunctional -strobe
		011	-	033	Plus Random, slow->fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
5	Red	000	-	255	Red 0%-100%	Red
6	Green	000	-	255	Green 0%-100%	Green
7	Blue	000	-	255	Blue 0%-100%	Blue
8	White	000	-	255	White 0%-100%	White
9	Colour Macro (override RGBW)	000	-	005	Colour OFF	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour jumping stop	
		128	-	191	Colour jumping Speed slow->fast/Colour1->12	
		192	-	255	Colour fading Speed slow->fast/Colour1->12	
10	Rainbow	000	-	006	Rainbow off	Rainbow effect
		006	-	021	Rainbow1	
		022	-	037	Rainbow2	
		038	-	053	Rainbow3	
		054	-	069	Rainbow4	
		070	-	085	Rainbow5	
		086	-	101	Rainbow6	
		102	-	117	Rainbow7	
		118	-	133	Rainbow8	
		134	-	149	Rainbow9	
		150	-	165	Rainbow10	
		166	-	181	Rainbow11	
		182	-	197	Rainbow12	
		198	-	213	Rainbow13	
		214	-	229	Rainbow14	
		230	-	255	Rainbow15	

11	Auto	000	-	005	No function	AUTO Program
		006	-	030	Auto Program1	
		031	-	055	Auto Program2	
		056	-	080	Auto Program3	
		081	-	105	Auto Program4	
		106	-	130	Auto Program5	
		131	-	155	Auto Program6	
		156	-	180	Auto Program7	
		181	-	205	Auto Program8	
		206	-	230	Auto Program9	
		231	-	255	Auto Program10	
12	Speed	000	-	255	Auto program speed slow->fast	Speed
13	Fade	000	-	255	Auto Fade	Fade
14	Dimmer Curve	000	-	005	No function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	
15	Device settings	000	-	005	No function	Device settings
		006	-	055	Dimmer Response LED (Hold 3s)	
		056	-	105	Dimmer Response Halogen (Hold 5s)	
		106	-	155	Setting Fan High Mode (Hold 3s)	
		156	-	205	Setting Fan Auto Mode (Hold 3s)	
		206	-	255	Reset All Function(Hold 5s)	
16	Red1	000	-	255	Red1 0%-100%	Red1
17	Green1	000	-	255	Green1 0%-100%	Green1
18	Blue1	000	-	255	Blue1 0%-100%	Blue1
19	White1	000	-	255	White1 0%-100%	White1
20	Red2	000	-	255	Red2 0%-100%	Red2
21	Green2	000	-	255	Green2 0%-100%	Green2
22	Blue2	000	-	255	Blue2 0%-100%	Blue2
23	White2	000	-	255	White2 0%-100%	White2
24	Red3	000	-	255	Red3 0%-100%	Red3
25	Green3	000	-	255	Green3 0%-100%	Green3
26	Blue3	000	-	255	Blue3 0%-100%	Blue3
27	White3	000	-	255	White3 0%-100%	White3
28	Red4	000	-	255	Red4 0%-100%	Red4
29	Green4	000	-	255	Green4 0%-100%	Green4
30	Blue4	000	-	255	Blue4 0%-100%	Blue4
31	White4	000	-	255	White4 0%-100%	White4
32	Ground Colour Dimmer	000	-	255	Ground Colour Dimmer 0%-100%	Ground Colour Dimmer
33	Ground Colour Strobe	000	-	255	Ground Colour Strobe slow->fast<1-20HZ	Ground Colour Strobe
34	Ground Colour Red	000	-	255	Ground Colour Red 0%-100%	Ground Colour Red
35	Ground Colour Green	000	-	255	Ground Colour Green 0%-100%	Ground Colour Green
36	Ground Colour Blue	000	-	255	Ground Colour Blue 0%-100%	Ground Colour Blue

37	Ground Colour Macro	000	-	005	Colour OFF	Ground Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow Amber	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118		125	Cold White	
		126		127	Colour jumping stop	
		128		191	Colour jumping Speed slow->fast/Colour1->12	
		192		255	Colour fading Speed slow->fast/Colour1->12	