


# Acme<sup>®</sup>

## THETA

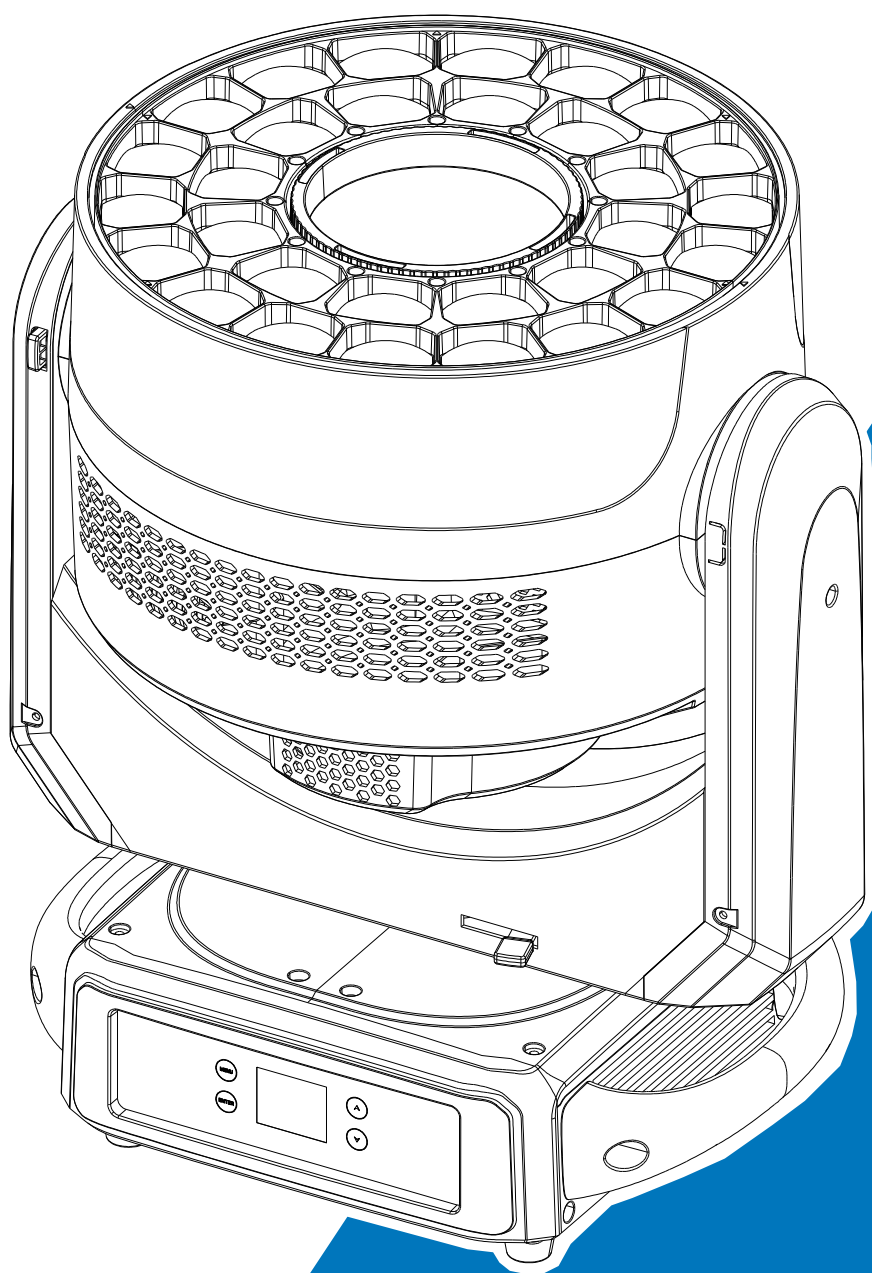

## User Manual

Please read the instruction carefully before use

## CONTENTS

|                                               |    |
|-----------------------------------------------|----|
| 01/ Safety Instructions.....                  | 2  |
| 02/ Technical Specifications .....            | 6  |
| 03/ Control Panel.....                        | 8  |
| 04/ Fixture Installation.....                 | 9  |
| 05/ Effect Wheels.....                        | 10 |
| 06/ How To Set The Unit.....                  | 11 |
| 6.1 Main Functions.....                       | 11 |
| 6.2 Home Position Adjustment .....            | 27 |
| 07/ Control By Universal DMX Controller ..... | 34 |
| 7.1 DMX512 Connection.....                    | 34 |
| 7.2 Address Setting.....                      | 35 |
| 7.3 DMX512 Configuration.....                 | 35 |
| 08/ Error Information .....                   | 49 |
| 09/ Troubleshooting .....                     | 56 |
| 10/ Fixture Cleaning.....                     | 56 |

## 01/ Safety Instructions



Please read the instruction carefully which includes important information about the installation, usage and maintenance.

### WARNING

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction manual.

#### Important:

**Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.**

- Unpack and check carefully to ensure that there is no transportation damage before using the unit.
- This product is for indoor use only. Use only in a dry location.
- DO install and operate by qualified operator.
- DO NOT allow children to operate the fixture.
- Use safety chain when fixing the unit. Handle the unit by carrying its base instead of head only.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces.
- Be sure that no ventilation slots is blocked, otherwise the unit will be overheated.
- Before operation, ensure that you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Minimum ambient temperature TA: 0°C. Maximum ambient temperature TA: 40°C. Do not operate this product at a lower or higher temperature.
- DO NOT connect the device to any dimmer pack.
- Keep flammable materials away from the fixture while operating to avoid fire hazard.
- Make sure the power cord is not crimped or damaged; replace it immediately if damaged.
- Unit's surface temperature may reach up to 65°C. DO NOT touch the housing bare-handed during its operation.
- Avoid any flammable liquids, water or metal from entering the unit. Once it happens, cut

off the mains power immediately.

- DO NOT operate in a dirty or dusty environment. DO clean the fixture regularly.
- DO NOT touch any wire during operation as there might be a hazard of electric shock.
- Avoid entanglement of the power cord with other wires.
- The minimum distance to objects/surface must be more than 0.5 meters.
- In the event of serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- DO NOT open the housing as there are no user serviceable parts inside.
- DO NOT attempt to operate this unit if it becomes damaged. DO NOT attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
- Disconnect this product from its power source before servicing.
- DO use the original packaging if the device is to be transported.
- Avoid direct eye exposure to the light source while the product is on.
- DO NOT operate this product if you see damage on the housing, shields, or cables. Have the damaged parts replaced by an authorized technician at once.

## 01/ Consignes de sécurité



Veuillez lire attentivement les instructions qui contiennent des informations importantes sur l'installation, l'utilisation et l'entretien.

### ATTENTION

Veuillez conserver ce guide de l'utilisateur pour une consultation future. Si vous vendez l'appareil à un autre utilisateur, assurez-vous qu'il reçoive également ce manuel d'instructions.

#### Important:

**Les dommages causés par le non-respect de ce manuel d'utilisation ne sont pas couverts par la garantie. Le revendeur n'acceptera aucune responsabilité pour les défauts ou problèmes qui en résultent.**

- Déballez et vérifiez soigneusement qu'il n'y a pas de dommages dus au transport avant d'utiliser l'appareil.
- Ce produit est destiné à un usage intérieur uniquement. Il doit donc être utilisé uniquement dans un endroit sec.
- L'installation et la mise en fonctionnement doit être effectué par un opérateur qualifié.
- NE PAS permettre aux enfants d'utiliser l'appareil.
- Utilisez une chaîne de sécurité lors de la fixation de l'unité. Manipulez l'appareil en portant sa base au lieu de la tête uniquement.
- L'unité doit être installée dans un endroit avec une ventilation adéquate, à au moins 50cm des surfaces adjacentes.
- Assurez-vous qu'aucune fente d'aération du luminaire n'est obstruée, sinon il risque de surchauffer.
- Avant toute utilisation, assurez-vous que vous connectez ce luminaire à la tension appropriée conformément aux spécifications que vous trouverez dans ce manuel ou sur l'étiquette des spécifications collée sur la base du luminaire.
- Il est important de relier le file jaune/vert à la terre afin d'éviter tout choc électrique.
- Température ambiante minimale TA: 0°C. Température ambiante maximale TA: 40°C. N'utilisez pas ce luminaire à des températures inférieures ou supérieures.
- NE PAS connecter le luminaire à un pack de gradateurs.
- Gardez les matériaux inflammables à l'écart du luminaire pendant le fonctionnement

pour éviter tout risque d'incendie.


- Assurez-vous que le cordon d'alimentation n'est pas pincé ou endommagé; remplacez-le immédiatement s'il est endommagé.
- La température de surface de l'unité peut atteindre 65°C. NE PAS toucher les capots à mains nues pendant son fonctionnement.
- Évitez que des liquides inflammables, de l'eau ou du métal ne pénètrent dans l'appareil. Si cela se produit, coupez immédiatement l'alimentation secteur.
- NE PAS utiliser le luminaire dans un environnement sale ou poussiéreux. Cette appareil doit être nettoyer régulièrement.
- NE touchez AUCUN file pendant le fonctionnement car il pourrait y avoir un risque de choc électrique.
- Évitez l'enchevêtrement du cordon d'alimentation avec d'autres fils.
- La distance minimale de projection sur des objets ou sur des surfaces doit être supérieure à 0.5 mètres.
- En cas de problème de fonctionnement grave, arrêtez immédiatement d'utiliser l'appareil.
- N'allumez et n'éteignez jamais ce luminaire à maintes reprises.
- Le boîtier, les lentilles ou le filtre ultraviolet doivent être remplacés s'ils sont visiblement endommagés.
- NE PAS ouvrir le boîtier car il ne contient aucune pièce réparable par l'utilisateur.
- NE PAS mettre ce luminaire en fonctionnement s'il est endommagé. N'effectuez pas de réparations vous-même. Les réparations ne doivent être effectuées par des personnes non qualifiées, cela peut entraîner des dommages ou des dysfonctionnements. Veuillez contacter le centre d'assistance technique agréé le plus proche si nécessaire.
- Débranchez ce produit du secteur avant de procéder à l'entretien.
- Utiliser l'emballage d'origine si l'appareil doit être transporté.
- Évitez une exposition directe des yeux à la source lumineuse lorsque le produit est allumé.
- N'utilisez PAS ce produit si vous constatez des dommages sur le boîtier, les blindages ou les câbles. Faites remplacer immédiatement les pièces endommagées par un technicien agréé.

## 02/ Technical Specifications

|                   |                                                                      |                          |
|-------------------|----------------------------------------------------------------------|--------------------------|
| Power Voltage     | 100-240V~ 50/60Hz                                                    |                          |
| Power Consumption | 1600W                                                                |                          |
| Light Source      | 1x200W CW LED                                                        |                          |
|                   | 30x40W RGBW LED                                                      |                          |
| Beam Angle        | 3°                                                                   |                          |
| Zoom Range        | 4°-51°                                                               |                          |
| Dimmer/Strobe     | 0-100% smooth dimming; outstanding strobe effect with variable speed |                          |
| Color Wheel       | 13 colors + open with rainbow effect                                 |                          |
| Gobo Wheel        | Static Gobo Wheel                                                    | 9 gobos + open           |
| Movement          | Pan                                                                  | 540°                     |
|                   | Tilt                                                                 | 210°                     |
|                   | Pan/Tilt Resolution                                                  | 16 bit                   |
|                   | Automatic pan/tilt position correction                               |                          |
|                   | Fixation                                                             | Pan/Tilt lock            |
| Control           | DMX Channel                                                          | 27/139/19+               |
|                   | Control Mode                                                         | DMX512                   |
|                   |                                                                      | RDM                      |
|                   |                                                                      | Art-Net                  |
|                   |                                                                      | sACN                     |
|                   | Firmware Upgrade                                                     | via DMX link or USB disk |
| Construction      | Display                                                              | LCD display              |
|                   | Battery backup for user setup without mains connection               |                          |
|                   | Data In/Out                                                          | 3/5-pin XLR              |
|                   |                                                                      | RJ45 Connector           |
|                   | Power In/Out                                                         | Power Connector in       |
|                   | Protection Rating                                                    | IP20                     |


*Description for power cord set should be used: Listed SJT flexible cord with 6-20P plug, minimum rating: 300V, 90°C, VW-1, 16AWGx3C, and terminated with cord connector model SAC3FX with rating 250V, 16A by NINGBO HAISHU DISTRICT SEETRONIC ELECTRONIC CO LTD. The length of power cord shall be at least 914mm (It is to be measured from the face of the attachment plug to the face of the Cord Connector).*

|                   |                                                                                                 |                      |
|-------------------|-------------------------------------------------------------------------------------------------|----------------------|
| <b>Features</b>   | Motorized focus                                                                                 |                      |
|                   | Motorized zoom                                                                                  |                      |
|                   | Independent frost effect                                                                        |                      |
|                   | 2 x prisms: 8-facet prism + 16-facet prism, capable of bidirectional rotation and superposition |                      |
|                   | Variable CTO                                                                                    |                      |
|                   | Pixel control, outstanding color macro effect                                                   |                      |
|                   | With color correction system to ensure consistent color output                                  |                      |
|                   | Powerful beam and wash effects                                                                  |                      |
| <b>Dimensions</b> | 453.7x341x589.4mm                                                                               | 17.9"x13.4"x23.2" in |
| <b>Weight</b>     | 34kgs                                                                                           | 75lbs                |

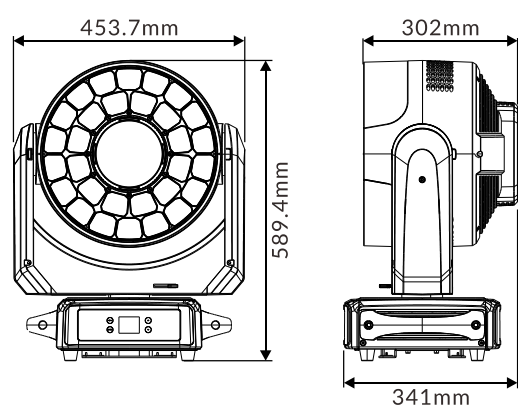


# Photometric Diagram:


BEAM (CW):

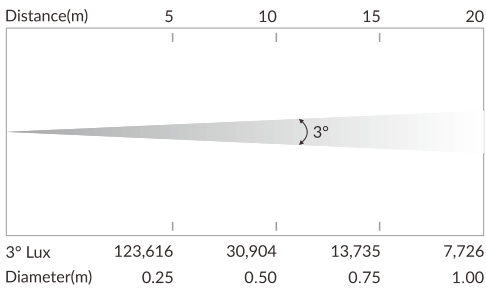


Beam Angle (RGBW):

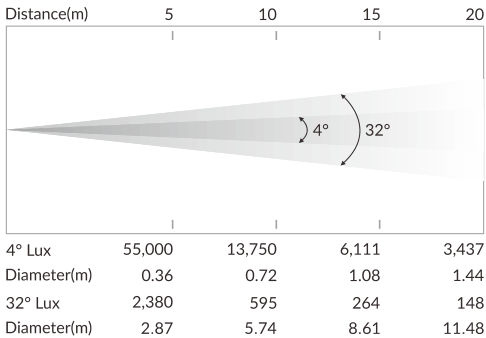

Field Angle (RGBW):

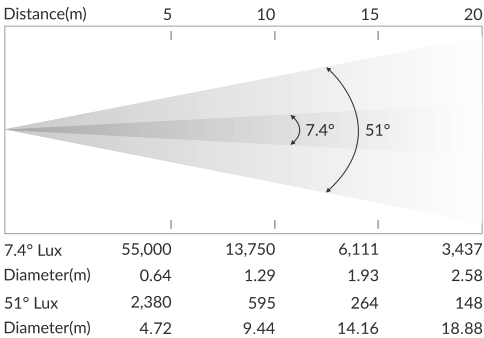


## 03/ Control Panel

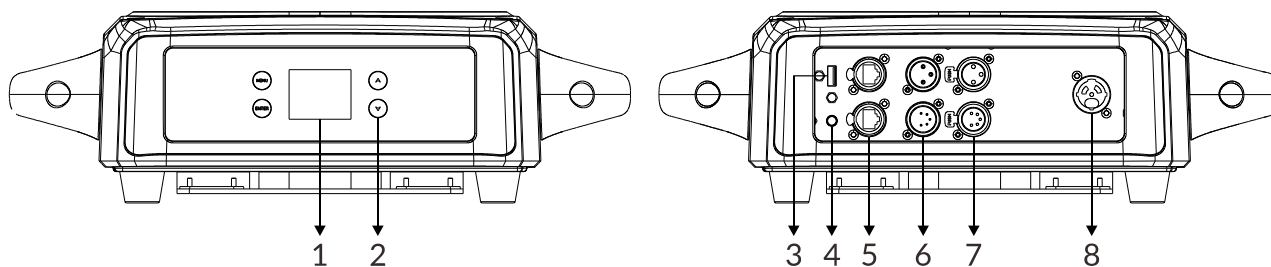


|                     |                                                                                                |                                               |
|---------------------|------------------------------------------------------------------------------------------------|-----------------------------------------------|
| 1. Display          | To show the various menus and the selected function                                            |                                               |
| 2. Buttons          | MENU                                                                                           | To enter into move backward or leave the menu |
|                     | ▲ UP                                                                                           | To go backward to move up in the menu         |
|                     | ▼ DOWN                                                                                         | To go forward to move down in the menu        |
|                     | ENTER                                                                                          | To perform the desired functions              |
| 3. FIRMWARE UPGRADE | Used to upgrade fixture's firmware                                                             |                                               |
| 4. BATTERY DISPLAY  |                                                                                                |                                               |
| 5. ETHERNET         | Transfers fixture's information to a main controller                                           |                                               |
| 6. DMX IN           | For DMX512 link, use 3/5-pin XLR cable to link the unit and DMX controller to input DMX signal |                                               |
| 7. DMX OUT          | For DMX512 link, use 3/5-pin XLR cable to link the next units to output DMX signal             |                                               |
| 8. POWER            | To connect to supply power                                                                     |                                               |


## 04/ Fixture Installation

- ▶ DO install and operate by qualified operator. Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand. NEVER stand directly below the fixture(s) when rigging, removing or servicing.
- ▶ Always ensure that the unit is firmly fixed to avoid vibration and slipping off during operation. Ensure that the trussing or area of installation must be able to hold 10 times the weight without any deformation. Always attach a safety cable that can hold at least 12 times the weight of the fixture whenever installing this fixture in a suspended environment to ensure that the fixture will not fall if the clamp fails.
- ▶ This fixture is fully operational in three different mounting positions: hanging upside-down, mounted sideways on trussing, or standing on the floor. Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

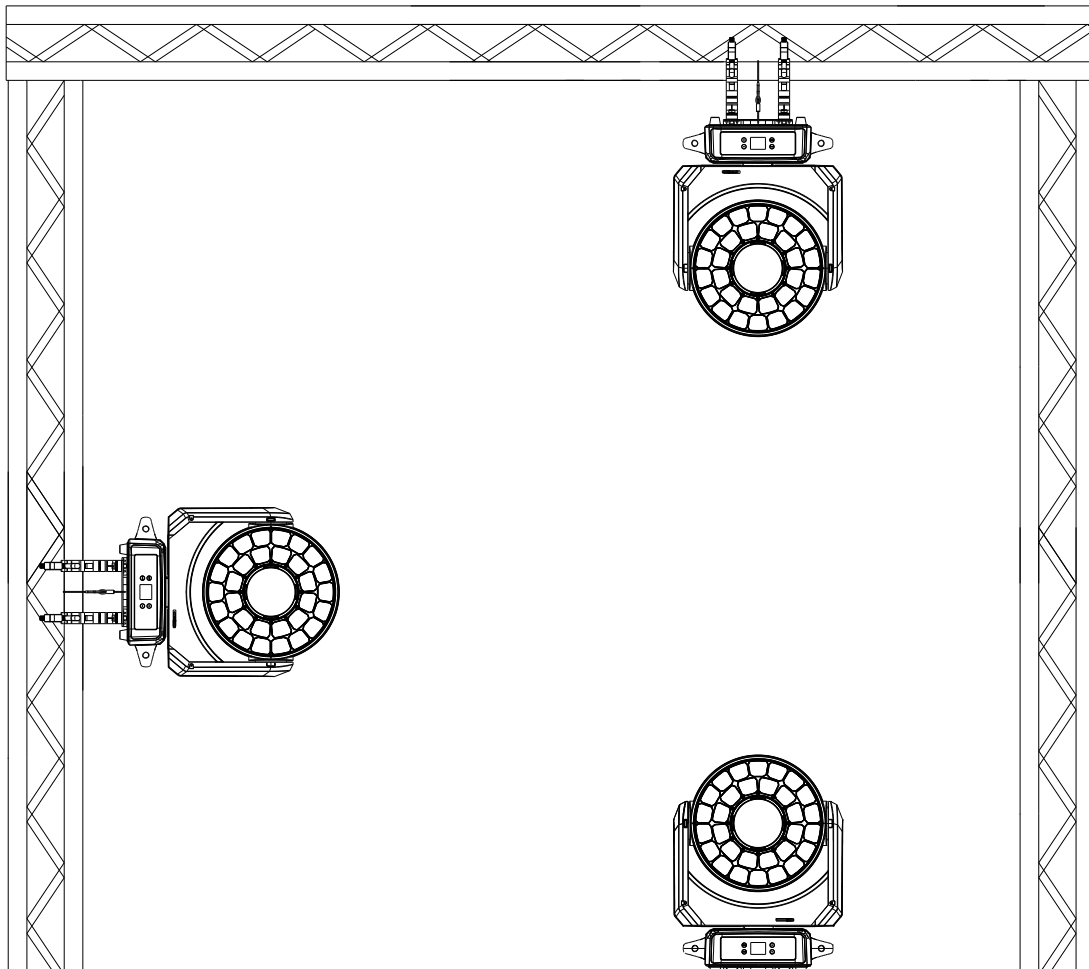

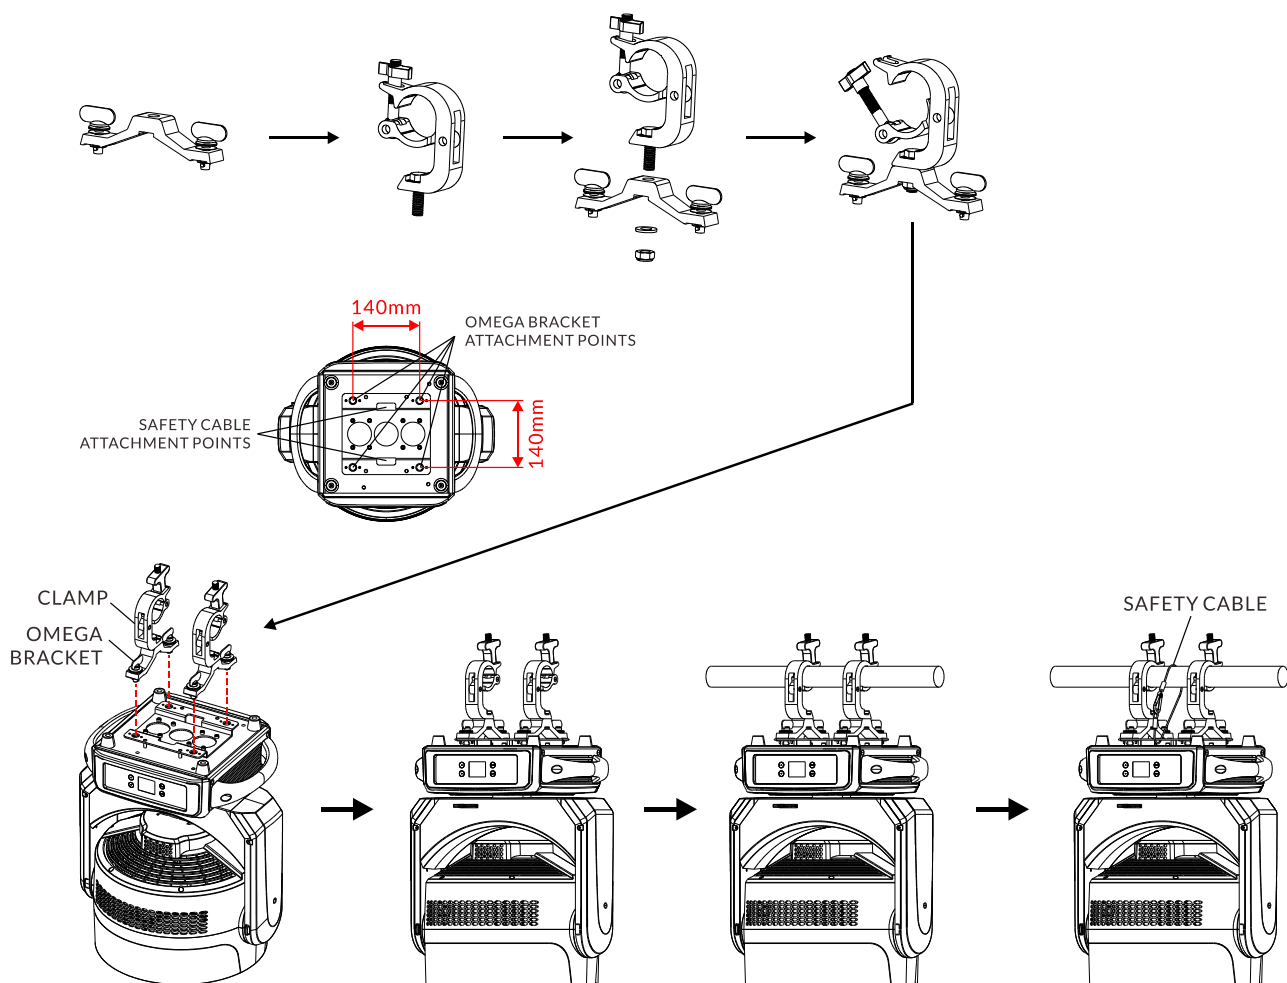

## 05/ Effect Wheels

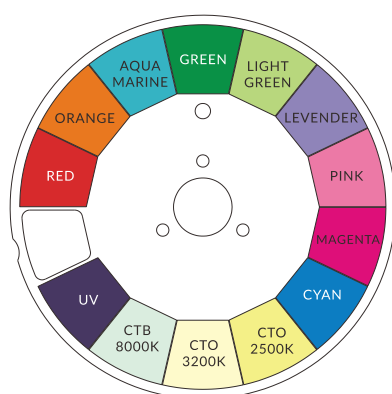

COLOR WHEEL



STATIC GOBO WHEEL

### DANGER!

Install the color wheel / gobo wheel with the device switched off only.  
Unplug from mains before changing the color wheel / gobo wheel!

## 06/ How To Set The Unit

### 6.1 Main Functions

- ▶ To access the control menus, press the [MENU] button.
- ▶ Navigate the menu structure, using the [ENTER], [▲ UP] and [▼ DOWN] buttons.
- ▶ To select a menu option or to confirm a selection, press the [ENTER] button.
- ▶ To return to a higher level in the menu structure without making a change, press the [MENU] button, or wait 30 seconds.

The main functions are shown below:

| MENU         | SUBMENU          | OPTIONS        |                           |               |
|--------------|------------------|----------------|---------------------------|---------------|
| DMX Settings | Port A Address   | 1-486 (27 CH)  | (Default=1)               |               |
|              |                  | 1-374 (139 CH) |                           |               |
|              |                  | 1-494 (19+ CH) |                           |               |
|              | Port B Address   | 1-393 (19+ CH) | (Default=1)               |               |
|              | DMX Channel Mode | Mode 1 (27)    |                           |               |
|              |                  | Mode 2 (139)   |                           |               |
|              |                  | Mode 3 (19+)   |                           |               |
|              | No DMX Status    | Blackout       |                           |               |
|              |                  | Hold           |                           |               |
|              |                  | Manual         |                           |               |
|              | View DMX Value   |                |                           |               |
|              | Connect Option   | Auto           |                           |               |
|              |                  | DMX            |                           |               |
|              |                  | Art-Net        |                           |               |
|              |                  | sACN           |                           |               |
|              | Network          | IP Address     | Default 1:002.xxx.xxx.xxx |               |
|              |                  |                | Default 2:010.xxx.xxx.xxx |               |
|              |                  |                | Manual:xxx.xxx.xxx.xxx    |               |
|              |                  | Sub-Net Mask   | xxx.xxx.xxx.xxx           |               |
|              | Art-Net Settings | Net            | 0-127                     | (Default=0)   |
|              |                  | Sub-Net        | 0-15                      | (Default=0)   |
|              |                  | Universe A     | 0-15                      | (Default=0)   |
|              |                  | Universe B     | 0-15                      | (Default=0)   |
|              | sACN Settings    | Universe       | 1-32000                   | (Default=1)   |
|              |                  | Priority       | 0-200                     | (Default=100) |
|              |                  |                |                           |               |

| MENU             | SUBMENU        | OPTIONS          |         |
|------------------|----------------|------------------|---------|
| Fixture Settings | Network to DMX | No               |         |
|                  |                | Yes              |         |
|                  | Pan Invert     | No               |         |
|                  |                | Yes              |         |
|                  | Tilt Invert    | No               |         |
|                  |                | Yes              |         |
|                  | P/T Feedback   | No               |         |
|                  |                | Yes              |         |
|                  | Dimmer Curve   | Linear           |         |
|                  |                | Square Law       |         |
|                  |                | Inv SQ Law       |         |
|                  |                | S Curve          |         |
|                  | Dimmer Speed   | Fast             |         |
|                  |                | Smooth           |         |
|                  | White Balance  | LED Red Zone 1   | 125-255 |
|                  |                | LED Green Zone 1 | 125-255 |
|                  |                | LED Blue Zone 1  | 125-255 |
|                  |                | LED Red Zone 2   | 125-255 |
|                  |                | LED Green Zone 2 | 125-255 |
|                  |                | LED Blue Zone 2  | 125-255 |
|                  |                | LED Red Zone 3   | 125-255 |
|                  |                | LED Green Zone 3 | 125-255 |
|                  |                | LED Blue Zone 3  | 125-255 |
|                  |                | LED Red          | 125-255 |
|                  |                | LED Green        | 125-255 |
|                  |                | LED Blue         | 125-255 |
|                  |                | LED Red 1        | 125-255 |
|                  |                | LED Green 1      | 125-255 |
|                  |                | LED Blue 1       | 125-255 |
|                  |                | .....            | .....   |
|                  |                | LED Red 30       | 125-255 |
|                  |                | LED Green 30     | 125-255 |
|                  |                | LED Blue 30      | 125-255 |
|                  |                |                  |         |

| MENU             | SUBMENU             | OPTIONS      |              |  |
|------------------|---------------------|--------------|--------------|--|
|                  | LED Refresh Rate    | 900Hz        |              |  |
|                  |                     | 1000Hz       |              |  |
|                  |                     | 1100Hz       |              |  |
|                  |                     | 1200Hz       |              |  |
|                  |                     | 1300Hz       |              |  |
|                  |                     | 1400Hz       |              |  |
|                  |                     | 1500Hz       |              |  |
|                  |                     | 2500Hz       |              |  |
|                  |                     | 4000Hz       |              |  |
|                  |                     | 5000Hz       |              |  |
|                  |                     | 6000Hz       |              |  |
|                  |                     | 10KHz        |              |  |
|                  |                     | 15KHz        |              |  |
|                  |                     | 20KHz        |              |  |
|                  |                     | 25KHz        |              |  |
|                  |                     | Cooling Mode | Auto         |  |
|                  |                     |              | Quiet        |  |
|                  | Invert Pixel Order  | No           |              |  |
|                  |                     | Yes          |              |  |
|                  | Color Calibration   | Off          |              |  |
|                  |                     | On           |              |  |
|                  | Calibration Mode    | Hi CRI       |              |  |
|                  |                     | Hi Output    |              |  |
|                  | Gobo Short Cut      | Enable       |              |  |
| Disable          |                     |              |              |  |
| Color Short Cut  | Enable              |              |              |  |
|                  | Disable             |              |              |  |
| Display Settings | Display Invert      | No           |              |  |
|                  |                     | Yes          |              |  |
|                  | Backlight Intensity | 1-10         | (Default=10) |  |
|                  | Temperature Unit    | °C           |              |  |
|                  |                     | °F           |              |  |
|                  |                     |              |              |  |

| MENU         | SUBMENU     | OPTIONS     |        |             |        |
|--------------|-------------|-------------|--------|-------------|--------|
| Fixture Test | Auto Test   | Single      |        |             |        |
|              |             | Cycle       |        |             |        |
|              | Manual Test | Mode 1      |        | Mode 2      |        |
|              |             | Clear       | No/Yes | Clear       | No/Yes |
|              |             | Pan         | 0-255  | Pan         | 0-255  |
|              |             | Tilt        | 0-255  | Tilt        | 0-255  |
|              |             | X/Y Speed   | 0-255  | X/Y Speed   | 0-255  |
|              |             | All Dimmer  | 0-255  | All Dimmer  | 0-255  |
|              |             | Beam Strobe | 0-255  | Beam Strobe | 0-255  |
|              |             | Wash Strobe | 0-255  | Wash Strobe | 0-255  |
|              |             | Beam Dim    | 0-255  | Beam Dim    | 0-255  |
|              |             | Color       | 0-255  | Color       | 0-255  |
|              |             | Gobo        | 0-255  | Gobo        | 0-255  |
|              |             | 8/16 Prism  | 0-255  | 8/16 Prism  | 0-255  |
|              |             | 8 R-Prism   | 0-255  | 8 R-Prism   | 0-255  |
|              |             | 16 R-Prism  | 0-255  | 16 R-Prism  | 0-255  |
|              |             | Frost       | 0-255  | Frost       | 0-255  |
|              |             | Focus       | 0-255  | Focus       | 0-255  |
|              |             | Zoom        | 0-255  | Zoom        | 0-255  |
|              |             | Red 1       | 0-255  | Red         | 0-255  |
|              |             | Green 1     | 0-255  | Green       | 0-255  |
|              |             | Blue 1      | 0-255  | Blue        | 0-255  |
|              |             | White 1     | 0-255  | White       | 0-255  |
|              |             | .....       | 0-255  | Cto         | 0-255  |
|              |             | Red 30      | 0-255  | Color Macro | 0-255  |
|              |             | Green 30    | 0-255  | Wash Macro  | 0-255  |
|              |             | Blue 30     | 0-255  | Macro Speed | 0-255  |
|              |             | White 30    | 0-255  |             |        |

| MENU                | SUBMENU          | OPTIONS         |              |         |     |  |
|---------------------|------------------|-----------------|--------------|---------|-----|--|
| Fixture Information | Fixture Use Hour |                 |              |         |     |  |
|                     | LED Use Hour     | Total LED Hour  |              |         |     |  |
|                     |                  | LED On Hour     |              |         |     |  |
|                     |                  | LED Hours Reset | Password=050 |         |     |  |
|                     | Temperature      | LED's           |              | Current | Max |  |
|                     |                  |                 | LED 1        |         |     |  |
|                     |                  |                 | LED 2        |         |     |  |
|                     |                  |                 | LED 3        |         |     |  |
|                     |                  |                 | LED 4        |         |     |  |
|                     | Upgrade File     |                 |              |         |     |  |
|                     | Fan State        | B_FAN 1-4       |              |         |     |  |
|                     |                  | H_FAN 1-5       |              |         |     |  |
|                     | Firmware Version |                 |              |         |     |  |
|                     | RDM UID          |                 |              |         |     |  |
| Error Logs          | Fixture Errors   |                 |              |         |     |  |
|                     | Reset Error Log  | No              |              |         |     |  |
|                     |                  | Yes             | Password=050 |         |     |  |
| Reset Function      | Pan/Tilt Reset   | No              |              |         |     |  |
|                     |                  | Yes             |              |         |     |  |
|                     | Effect Reset     | No              |              |         |     |  |
|                     |                  | Yes             |              |         |     |  |
|                     | All Reset        | No              |              |         |     |  |
|                     |                  | Yes             |              |         |     |  |
| Special Function    | Factory Settings | No              |              |         |     |  |
|                     |                  | Yes             |              |         |     |  |

## DMX Settings

Enter the control menu and select **DMX Settings**, press ENTER. Use the UP/DOWN button to select **Port A Address**, **Port B Address**, **DMX Channel Mode**, **No DMX Status**, **View DMX Value**, **Connect Option**, **Network**, **Art-Net Settings**, **sACN Settings** or **Network to DMX**.

### Port A Address

Select **Port A Address**, press ENTER.

Use UP/DOWN button to select an address, confirm your selection with ENTER.

| CHANNEL MODE | DMX ADDRESS |
|--------------|-------------|
| Mode 1 (27)  | 1-486       |
| Mode 2 (139) | 1-374       |
| Mode 3 (19+) | 1-494       |

To exit the menu, press MENU, or wait 30 seconds.

### Port B Address

Select **Port B Address**, press ENTER.

Use UP/DOWN button to select an address, confirm your selection with ENTER.

| CHANNEL MODE | DMX ADDRESS |
|--------------|-------------|
| Mode 3 (19+) | 1-393       |

To exit the menu, press MENU, or wait 30 seconds.

### DMX Channel Mode

Select **DMX Channel Mode**, press ENTER.

Use UP/DOWN button to select between **Mode 1 (27)**, **Mode 2 (139)** and **Mode 3 (19+)**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## No DMX Status

Select **No DMX Status**, press ENTER.

Use UP/DOWN button to select one of the following status:

**Blackout** (Fixture blacks out if DMX signal stops)

**Hold** (The device continues to operate in the current mode with the last active DMX values until the signal returns)

**Manual** (The device accepts the DMX value stored in the 'Manual Test' menu)

Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## View DMX Value

Select **View DMX Value**, press ENTER.

Use UP/DOWN button to select the desired DMX channel, for which the value is to be displayed.

To exit the menu, press MENU, or wait 30 seconds.

## Connect Option

Select **Connect Option**, press ENTER.

Use UP/DOWN button to select **Auto**, **DMX**, **Art-Net** or **sACN**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Network

Select **Network**, press ENTER.

Use UP/DOWN button to select **IP Address** or **Subnet Mask**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Art-Net Settings

Select **Art-Net Settings**, press ENTER.

Use UP/DOWN button to select **Net**, **Sub-Net**, **Universe A** or **Universe B**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## sACN Settings

Select **sACN Settings**, press ENTER.

Use UP/DOWN button to select **Universe** or **Priority**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Network to DMX

Select **Network to DMX**, press ENTER.

Use UP/DOWN button to select **No** or **Yes**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Fixture Settings

Enter the control menu and select **Fixture Settings**, press ENTER. Use the UP/DOWN button to select **Pan Invert**, **Tilt Invert**, **P/T Feedback**, **Dimmer Curve**, **Dimmer Speed**, **White Balance**, **LED Refresh Rate**, **Cooling Mode**, **Invert Pixel Order**, **Color Calibration**, **Calibration Mode**, **Gobo Short Cut** or **Color Short Cut**.

### Pan Invert

Select **Pan Invert**, press ENTER.

Use UP/DOWN button to select **No** (pan invert deactivated) or **Yes** (pan invert activated), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

### Tilt Invert

Select **Tilt Invert**, press ENTER.

Use UP/DOWN button to select **No** (tilt invert deactivated) or **Yes** (tilt invert activated), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## P/T Feedback

Select **P/T Feedback**, press ENTER.

Use UP/DOWN button to select **No** (pan/tilt feedback deactivated) or **Yes** (pan/tilt feedback activated), confirm your selection with ENTER.


To exit the menu, press MENU, or wait 30 seconds.

## Dimmer Curve

Select **Dimmer Curve**, press ENTER.


Use UP/DOWN button to select **Linear**, **Square Law**, **Inv SQ Law** or **S Curve**, confirm your selection with ENTER.

### Dimmer Modes

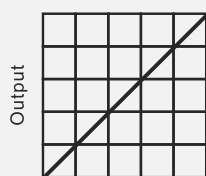


DMX %

Optically Linear

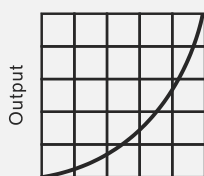


DMX %

Square Law

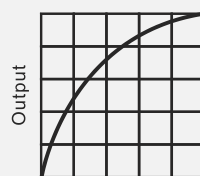

DMX %

Inverse Square Law

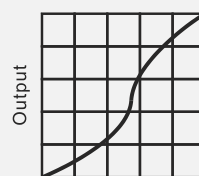

DMX %

S-curve

To exit the menu, press MENU, or wait 30 seconds.

## Dimmer Speed

Select **Dimmer Speed**, press ENTER.

Use UP/DOWN button to select **Fast** or **Smooth**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## White Balance

Select **White Balance**, press ENTER.

Use UP/DOWN button to select **LED Red Zone 1**, **LED Green Zone 1**, **LED Blue Zone 1**.....**LED Red Zone 3**, **LED Green Zone 3**, **LED Blue Zone 3**, **LED Red**, **LED Green**, **LED Blue**, **LED Red1**, **LED Green1**, **LED Blue1**..... or **LED Red30**, **LED Green30**, **LED Blue30**, confirm your selection with ENTER.

Use UP/DOWN button to select a value between **125** and **255**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## LED Refresh Rate

Select **LED Refresh Rate**, press ENTER.

Use UP/DOWN button to select **900Hz, 1000Hz, 1100Hz, 1200Hz, 1300Hz, 1400Hz, 1500Hz, 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz or 25KHz**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Cooling Mode

Select **Cooling Mode**, press ENTER.

Use UP/DOWN button to select **Auto** or **Quiet**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Invert Pixel Order

Select **Invert Pixel Order**, press ENTER.

Use UP/DOWN button to select **No** or **Yes**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Color Calibration

Select **Color Calibration**, press ENTER.

Use UP/DOWN button to select **Off** or **On**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Calibration Mode

Select **Calibration Mode**, press ENTER.

Use UP/DOWN button to select **Hi CRI** or **Hi Output**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Gobo Short Cut

Select **Gobo Short Cut**, press ENTER.

Use UP/DOWN button to select **Enable** or **Disable**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Color Short Cut

Select **Color Short Cut**, press ENTER.

Use UP/DOWN button to select **Enable** or **Disable**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Display Settings

Enter the control menu and select **Display Settings**, press ENTER. Use the UP/DOWN button to select **Display Invert**, **Backlight Intensity** or **Temperature Unit**.

### Display Invert

Select **Display Invert**, press ENTER.

Use UP/DOWN button to select **No** (display normal) or **Yes** (display inverted), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

### Backlight Intensity

Select **Backlight Intensity**, press ENTER.

Use UP/DOWN button to select a value between **1** (dark) and **10** (bright), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

### Temperature Unit

Select **Temperature Unit**, press ENTER.

Use UP/DOWN button to select **°C** or **°F**, confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Fixture Test

Enter the control menu and select **Fixture Test**, press ENTER. Use the UP/DOWN button to select **Auto Test** or **Manual Test**.

### Auto Test

Select **Auto Test**, press ENTER.

Use UP/DOWN button to select **Single** (the device immediately performs a single automatic self-test) or **Cycle** (the device immediately performs a cyclic automatic self-test), confirm your selection with ENTER.

To exit the menu, press MENU.

### Manual Test

Select **Manual Test**, press ENTER.

Use UP/DOWN button to select the channel for which the manual test is to be performed, confirm your selection with ENTER.

Use UP/DOWN button to select a value, confirm your selection with ENTER.

To exit the menu, press MENU.

(The device returns to its original DMX state after the manual test. The test values are saved automatically when the device is switched off.)

## Fixture Information

Enter the control menu and select **Fixture Information**, press ENTER. Use the UP/DOWN button to select **Fixture Use Hour**, **LED Use Hour**, **Temperature**, **Upgrade File**, **Fan State**, **Firmware Version**, **RDM UID** or **Error Logs**.

### Fixture Use Hour

Select **Fixture Use Hour**, press ENTER.

The operating hours is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## LED Use Hour

Select **LED Use Hour**, press ENTER.

Use UP/DOWN button to select **Total LED Hour** (total time) or **LED On Hour** (current switch-on time), confirm your selection with ENTER.

The total time or current switch-on time is displayed.

Use UP/DOWN button to select **LED Hours Reset**, confirm your selection with ENTER.

Use UP/DOWN button to set the password 050, confirm your selection with ENTER. The LED operating hours is reset.

To exit the menu, press MENU, or wait 30 seconds.

## Temperature

Select **Temperature**, press ENTER.

The device temperature is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## Upgrade File

Select **Upgrade File**, press ENTER.

The upgrade file is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## Fan State

Select **Fan State**, press ENTER.

The fan status is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## Firmware Version

Select **Firmware Version**, press ENTER.

The firmware version is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## RDM UID

Select **RDM UID**, press ENTER.

The RDM UID is displayed.

To exit the menu, press MENU, or wait 30 seconds.

## Error Logs

Select **Error Logs**, press ENTER.

Use UP/DOWN button to select **Fixture Errors**, confirm your selection with ENTER.

The error list is displayed.

Use UP/DOWN button to select **Reset Error Log**, confirm your selection with ENTER.

If you wish to reset the relevant error logs, select **Yes**. If you do not wish to reset anything, select **No**. Confirm your selection with ENTER.

If you select **Yes**, use UP/DOWN button to set the password 050, confirm your selection with ENTER. The relevant error logs are reset.

To exit the menu, press MENU, or wait 30 seconds.

## Reset Function

Enter the control menu and select **Reset Function**, press ENTER. Use the UP/DOWN button to select **Pan/Tilt Reset**, **Effect Reset** or **All Reset**.

### Pan/Tilt Reset

Select **Pan/Tilt Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset pan/tilt to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

### Effect Reset

Select **Effect Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset effect to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## All Reset

Select **All Reset**, press ENTER.

Use UP/DOWN button to select **No** or **Yes** (the device will run built-in program to reset all to their home positions), confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

## Special Function

Enter the control menu and select **Special Function**, press ENTER. Use the UP/DOWN button to select **Factory Settings**.

## Factory Settings

Select **Factory Settings**, press ENTER.

If you wish to reset the device to the factory settings, select **Yes**. If you do not wish to reset anything, select **No**. Confirm your selection with ENTER.

To exit the menu, press MENU, or wait 30 seconds.

**RDM functions:** Certain menus of the device and functions can be called up via the RDM protocol.

The parameter IDs are implemented as follows for different commands:

| Parameter ID                | Command<br>'Discovery' | Command<br>'Set' | Command<br>'Get' |
|-----------------------------|------------------------|------------------|------------------|
| DISC_UNIQUE_BRANCH          | ✓                      |                  |                  |
| DISC_MUTE                   | ✓                      |                  |                  |
| DISC_UN_MUTE                | ✓                      |                  |                  |
| DEVICE_INFO                 |                        |                  | ✓                |
| SUPPORTED_PARAMETERS        |                        |                  | ✓                |
| SOFTWARE_VERSION_LABEL      |                        |                  | ✓                |
| DMX_START_ADDRESS           |                        | ✓                | ✓                |
| IDENTIFY_DEVICE             |                        | ✓                | ✓                |
| DEVICE_MODEL_DESCRIPTION    |                        |                  | ✓                |
| PARAMETER_DESCRIPTION       |                        |                  | ✓                |
| MANUFACTURER_LABEL          |                        |                  | ✓                |
| DEVICE_LABEL                |                        | ✓                | ✓                |
| FACTORY_DEFAULTS            |                        | ✓                | ✓                |
| BOOT_SOFTWARE_VERSION_ID    |                        |                  | ✓                |
| BOOT_SOFTWARE_VERSION_LABEL |                        |                  | ✓                |
| DMX_PERSONALITY             |                        | ✓                | ✓                |
| DMX_PERSONALITY_DESCRIPTION |                        |                  | ✓                |
| SLOT_INFO                   |                        |                  | ✓                |
| SLOT_DESCRIPTION            |                        |                  | ✓                |
| SENSOR_DEFINITION           |                        |                  | ✓                |
| SENSOR_VALUE                |                        |                  | ✓                |
| DEVICE_HOURS                |                        |                  | ✓                |
| LAMP_HOURS                  |                        |                  | ✓                |
| PAN_INVERT                  |                        | ✓                | ✓                |
| TILT_INVERT                 |                        | ✓                | ✓                |
| RESET_DEVICE                |                        | ✓                |                  |
| CURVE                       |                        | ✓                | ✓                |
| DMX_STATE                   |                        | ✓                | ✓                |
| DIMMER_SPEED                |                        | ✓                | ✓                |

✓ -Command implemented for the respective parameter ID

## 6.2 Home Position Adjustment

- ▶ To access the control menus, press the [MENU] button.
- ▶ To access the offset menus, long-press the [ENTER] button.
- ▶ Navigate the offset menus, using the [ENTER], [▲ UP] and [▼ DOWN] buttons.
- ▶ To select a menu option or to confirm a selection, press the [ENTER] button.
- ▶ To return to a higher level in the menu structure without making a change, press the [MENU] button, or wait 30 seconds.

| OFFSET MENU   | VALUES    |
|---------------|-----------|
| Frequency(Hz) | 1072~1327 |
| Pan           | -128~127  |
| Tilt          | -128~127  |
| Color         | -128~127  |
| Gobo          | -128~127  |
| 8 Prism       | -128~127  |
| 8 R-Prism     | -128~127  |
| 16 Prism      | -128~127  |
| 16 R-Prism    | -128~127  |
| Frost         | -128~127  |
| Focus         | -128~127  |
| Led Beam      | 0~1000    |
| Zoom          | -128~127  |
| Red           | 0~1000    |
| Green         | 0~1000    |
| Blue          | 0~1000    |
| White         | 0~1000    |
| Red 1         | 0~1000    |
| Green 1       | 0~1000    |
| Blue 1        | 0~1000    |
| White 1       | 0~1000    |
| .....         | .....     |
| Red 30        | 0~1000    |
| Green 30      | 0~1000    |
| Blue 30       | 0~1000    |
| White 30      | 0~1000    |

## Frequency(Hz)

Select **Frequency(Hz)**, press ENTER.

Use UP/DOWN button to select a value, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

| Frequency | VALUES      |
|-----------|-------------|
| 900Hz     | 772~1027    |
| 1000Hz    | 872~1127    |
| 1100Hz    | 972~1227    |
| 1200Hz    | 1072~1327   |
| 1300Hz    | 1172~1427   |
| 1400Hz    | 1272~1527   |
| 1500Hz    | 1372~1627   |
| 2500Hz    | 2372~2627   |
| 4000Hz    | 3872~4127   |
| 5000Hz    | 4872~5127   |
| 6000Hz    | 5872~6127   |
| 10KHz     | 9872~10127  |
| 15KHz     | 14872~15127 |
| 20KHz     | 19872~20127 |
| 25KHz     | 24872~25127 |

## Pan

Select **Pan**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Tilt

Select **Tilt**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Color

Select **Color**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Gobo

Select **Gobo**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## 8 Prism

Select **8 Prism**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## 8 R-Prism

Select **8 R-Prism**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## 16 Prism

Select **16 Prism**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## 16 R-Prism

Select **16 R-Prism**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Frost

Select **Frost**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Focus

Select **Focus**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Led Beam

Select **Led Beam**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Zoom

Select **Zoom**, press ENTER.

Use UP/DOWN button to select a value between -128 and 127, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Red

Select **Red**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Green

Select **Green**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Blue

Select **Blue**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## White

Select **White**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Red 1

Select **Red 1**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Green 1

Select **Green 1**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Blue 1

Select **Blue 1**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## White 1

Select **White 1**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

.....

## Red 30

Select **Red 30**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Green 30

Select **Green 30**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

## Blue 30

Select **Blue 30**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.


## White 30

Select **White 30**, press ENTER.

Use UP/DOWN button to select a value between 0 and 1000, confirm your selection with ENTER.

To exit the offset menu, press MENU, or wait 30 seconds.

### 7.1 DMX512 Connection

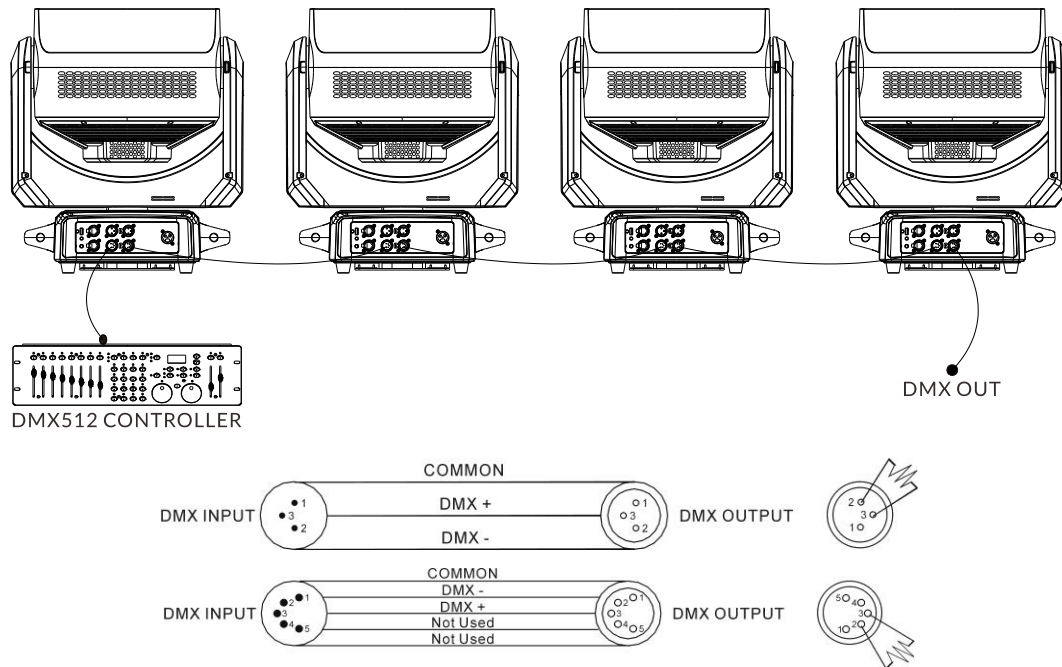

1. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120-ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
2. Connect the unit together in a “daisy chain” by XLR plug cable from the output of the unit to the input of the next unit. The cable can only be used in series and cannot be connected in parallel. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
3. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units’ power is disconnected.
4. Each lighting unit needs to have a DMX address to receive the data by the controller. The address number is between 1-512.
5. The end of the DMX 512 system should be terminated to reduce signal errors.
6. 3 pin XLR connectors are more popular than 5 pins XLR.
  - 3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)
  - 5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin4, Pin5 not used.

## 7.2 Address Setting

If you use a universal DMX controller to control the units, you have to set DMX address between 1 and 512 so that the units can receive DMX signal.

Press the MENU button to access the control menus, select DMX Settings, press the ENTER button to confirm. Use the UP/DOWN button to select Port A/B Address, press the ENTER button to confirm, the present address will show on the display. Use the UP/DOWN button to adjust the address between 001 and 512, press the ENTER button to store. To exit the menu, press MENU, or wait 30 seconds.

Please refer to the following diagram to address your DMX512 channel for the first 4 units.

| Channel Mode                            | Unit 1 Address | Unit 2 Address | Unit 3 Address | Unit 4 Address |
|-----------------------------------------|----------------|----------------|----------------|----------------|
| 27 channels                             | 1              | 28             | 55             | 82             |
| 139 channels                            | 1              | 140            | 279            | 418            |
| 19+ channels<br>(Controlled by DMX)     | 1              | 20             | 39             | 58             |
| 19+ channels<br>(Controlled by Art-Net) | 1              | 121            | 241            | 361            |

## 7.3 DMX512 Configuration

Please control the fixture by referring to the configurations below.

### Attentions:

- ▶ The unit will maintain the last condition until reset if you cut-off the DMX signal.
- ▶ For the channel Function, keep the value for about 3 seconds, then the corresponding function will take into effect.

| CHANNEL |       |                            | VALUE   | FUNCTION                               |
|---------|-------|----------------------------|---------|----------------------------------------|
| 27ch    | 139ch | 19+ch                      |         |                                        |
|         |       | 19+ ch (Controlled by DMX) |         |                                        |
| 1       | 1     | 1                          | 000-255 | PAN<br>0°→540°                         |
| 2       | 2     | 2                          | 000-255 | PAN FINE                               |
| 3       | 3     | 3                          | 000-255 | TILT<br>0°→210°                        |
| 4       | 4     | 4                          | 000-255 | TILT FINE                              |
| 5       | 5     | 5                          | 000-255 | PAN/TILT SPEED<br>Fast to Slow         |
| 6       | 6     | 6                          | 000-255 | DIMMER (BEAM & WASH)<br>0%→100%        |
| 7       | 7     | 7                          | 000-007 | BEAM STROBE                            |
|         |       |                            | 008-015 | Close                                  |
|         |       |                            | 016-131 | Open                                   |
|         |       |                            | 132-139 | Strobe from Slow to Fast               |
|         |       |                            | 140-181 | Open                                   |
|         |       |                            | 182-189 | Fast Open Slow Close from Slow to Fast |
|         |       |                            | 190-231 | Open                                   |
|         |       |                            | 232-239 | Slow Open Fast Close from Slow to Fast |
|         |       |                            | 240-247 | Open                                   |
|         |       |                            | 248-255 | Random Strobe from Slow to Fast        |
| 8       | 8     | 8                          | 000-007 | BEAM STROBE                            |
|         |       |                            | 008-015 | Close                                  |
|         |       |                            | 016-131 | Open                                   |
|         |       |                            | 132-139 | Strobe from Slow to Fast               |
|         |       |                            | 140-181 | Open                                   |
|         |       |                            | 182-189 | Fast Open Slow Close from Slow to Fast |
|         |       |                            | 190-231 | Open                                   |
|         |       |                            | 232-239 | Slow Open Fast Close from Slow to Fast |
|         |       |                            | 240-247 | Open                                   |
|         |       |                            | 248-255 | Random Strobe from Slow to Fast        |
| 9       | 9     | 9                          | 000-009 | SPECIAL FUNCTION                       |
|         |       |                            | 010-019 | Null                                   |
|         |       |                            | 020-029 | Null                                   |
|         |       |                            | 030-039 | Null                                   |
|         |       |                            | 040-049 | Dimmer Curve: Linear                   |
|         |       |                            | 050-059 | Dimmer Curve: Square Law               |
|         |       |                            | 060-069 | Dimmer Curve: Inv SQ Law               |
|         |       |                            | 070-079 | Dimmer Curve: S Curve                  |
|         |       |                            |         | Null                                   |

|    |    |    |         |                                 |
|----|----|----|---------|---------------------------------|
|    |    |    | 080-089 | Null                            |
|    |    |    | 090-099 | Null                            |
|    |    |    | 100-109 | Led Frequency Setting Enable    |
|    |    |    | 110-119 | Led Frequency Setting Disable   |
|    |    |    | 120-122 | Null                            |
|    |    |    | 123     | 900Hz                           |
|    |    |    | 124     | 1000Hz                          |
|    |    |    | 125     | 1100Hz                          |
|    |    |    | 126     | 1200Hz                          |
|    |    |    | 127     | 1300Hz                          |
|    |    |    | 128     | 1400Hz                          |
|    |    |    | 129     | 1500Hz                          |
|    |    |    | 130     | 2500Hz                          |
|    |    |    | 131     | 4000Hz                          |
|    |    |    | 132     | 5000Hz                          |
|    |    |    | 133     | 6000Hz                          |
|    |    |    | 134     | 10KHz                           |
|    |    |    | 135     | 15KHz                           |
|    |    |    | 136     | 20KHz                           |
|    |    |    | 137     | 25KHz                           |
|    |    |    | 138-139 | Null                            |
|    |    |    | 140-149 | Pan/Tilt Reset                  |
|    |    |    | 150-159 | Effect Reset                    |
|    |    |    | 160-169 | Color Calibration: On           |
|    |    |    | 170-179 | Color Calibration: Off          |
|    |    |    | 180-189 | Calibration Mode: High CRI      |
|    |    |    | 190-199 | Calibration Mode: High Output   |
|    |    |    | 200-209 | All Reset                       |
|    |    |    | 210-219 | Dimmer Speed: Fast              |
|    |    |    | 220-229 | Dimmer Speed: Smooth            |
|    |    |    | 230-231 | Gobo Short Cut: Enable          |
|    |    |    | 232-233 | Gobo Short Cut: Disable         |
|    |    |    | 234-235 | Color Short Cut: Enable         |
|    |    |    | 236-237 | Color Short Cut: Disable        |
|    |    |    | 238-239 | Null                            |
|    |    |    | 240-245 | Cooling Mode: Silent            |
|    |    |    | 246-251 | Cooling Mode: Auto              |
|    |    |    | 252-255 | Null                            |
| 10 | 10 | 10 | 000-255 | <b>BEAM DIMMER</b><br>0%→100%   |
| 11 | 11 | 11 | 000-007 | <b>BEAM COLOR WHEEL</b><br>Open |
|    |    |    | 008-011 | Color 1                         |
|    |    |    | 012-015 | Color 2                         |
|    |    |    | 016-019 | Color 3                         |
|    |    |    | 020-023 | Color 4                         |
|    |    |    | 024-027 | Color 5                         |

|    |    |    |                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----|----|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |    |    | 028-031<br>032-039<br>040-043<br>044-047<br>048-051<br>052-055<br>056-059<br>060-063<br>64<br>65<br>66<br>67<br>68<br>69<br>70<br>71<br>72<br>73<br>74<br>75<br>76<br>77<br>78<br>79<br>80<br>81<br>82<br>83<br>84<br>85<br>86<br>87<br>88<br>89<br>90<br>91-127<br>128-189<br>190-193<br>194-255 | Color 6<br>Color 7<br>Color 8<br>Color 9<br>Color 10<br>Color 11<br>Color 12<br>Color 13<br>Open<br>Open+Color 1<br>Color 1<br>Color 1+Color 2<br>Color 2<br>Color 2+Color 3<br>Color 3<br>Color 3+Color 4<br>Color 4<br>Color 4+Color 5<br>Color 5<br>Color 5+Color 6<br>Color 6<br>Color 6+Color 7<br>Color 7<br>Color 7+Color 8<br>Color 8<br>Color 8+Color 9<br>Color 9<br>Color 9+Color 10<br>Color 10<br>Color 10+Color 11<br>Color 11<br>Color 11+Color 12<br>Color 12<br>Color 12+Color 13<br>Color 13<br>Open<br>Clockwise Rotation, Fast to Slow<br>Stop<br>Counter-Clockwise Rotation, Slow to Fast |
| 12 | 12 | 12 | 000-007<br>008-013<br>014-019<br>020-025<br>026-031<br>032-037<br>038-043                                                                                                                                                                                                                         | <b>BEAM GOBO WHEEL</b><br>Open<br>Gobo 1<br>Gobo 2<br>Gobo 3<br>Gobo 4<br>Gobo 5<br>Gobo 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|    |    |    |                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----|----|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |    |    | 044-049<br>050-055<br>056-063<br>064-070<br>071-077<br>078-084<br>085-091<br>092-098<br>099-105<br>106-112<br>113-119<br>120-127<br>128-189<br>190-193<br>194-255 | Gobo 7<br>Gobo 8<br>Gobo 9<br>Gobo 1 Shaking, Slow to Fast<br>Gobo 2 Shaking, Slow to Fast<br>Gobo 3 Shaking, Slow to Fast<br>Gobo 4 Shaking, Slow to Fast<br>Gobo 5 Shaking, Slow to Fast<br>Gobo 6 Shaking, Slow to Fast<br>Gobo 7 Shaking, Slow to Fast<br>Gobo 8 Shaking, Slow to Fast<br>Gobo 9 Shaking, Slow to Fast<br>Counter-Clockwise Rotation, Fast to Slow<br>Stop<br>Clockwise Rotation, Slow to Fast |
| 13 | 13 | 13 | 000-007<br>008-090<br>091-173<br>174-255                                                                                                                          | <b>BEAM PRISMS</b><br>Open<br>8-facets prism<br>16-facets prism<br>8-facets prism + 16-facets prism                                                                                                                                                                                                                                                                                                                |
| 14 | 14 | 14 | 000-127<br>128-189<br>190-193<br>194-255                                                                                                                          | <b>BEAM 8-FACETS PRISM ROTATION</b><br>Index, 0°→360°<br>Counter-Clockwise Rotation, Fast to Slow<br>Stop<br>Clockwise Rotation, Slow to Fast                                                                                                                                                                                                                                                                      |
| 15 | 15 | 15 | 000-127<br>128-189<br>190-193<br>194-255                                                                                                                          | <b>BEAM 16-FACETS PRISM ROTATION</b><br>Index, 0°→360°<br>Counter-Clockwise Rotation, Fast to Slow<br>Stop<br>Clockwise Rotation, Slow to Fast                                                                                                                                                                                                                                                                     |
| 16 | 16 | 16 | 000-007<br>008-255                                                                                                                                                | <b>BEAM FROST</b><br>Close<br>Open                                                                                                                                                                                                                                                                                                                                                                                 |
| 17 | 17 | 17 | 000-255                                                                                                                                                           | <b>BEAM FOCUS</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                       |
| 18 | 18 | 18 | 000-255                                                                                                                                                           | <b>BEAM FOCUS FINE</b>                                                                                                                                                                                                                                                                                                                                                                                             |
| 19 | 19 | 19 | 000-255                                                                                                                                                           | <b>WASH ZOOM</b><br>Narrow→Wide                                                                                                                                                                                                                                                                                                                                                                                    |
| 20 |    |    | 000-255                                                                                                                                                           | <b>WASH RED</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                         |
| 21 |    |    | 000-255                                                                                                                                                           | <b>WASH GREEN</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                       |
| 22 |    |    | 000-255                                                                                                                                                           | <b>WASH BLUE</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                        |
| 23 |    |    |                                                                                                                                                                   | <b>WASH WHITE</b>                                                                                                                                                                                                                                                                                                                                                                                                  |

|    |  |  |         |                  |
|----|--|--|---------|------------------|
|    |  |  | 000-255 | 0%→100%          |
| 24 |  |  | 000     | WASH CCT<br>Null |
|    |  |  | 001-004 | 8000K            |
|    |  |  | 005-009 | 7900K            |
|    |  |  | 010-013 | 7800K            |
|    |  |  | 014-018 | 7700K            |
|    |  |  | 019-022 | 7600K            |
|    |  |  | 023-027 | 7500K            |
|    |  |  | 028-031 | 7400K            |
|    |  |  | 032-036 | 7300K            |
|    |  |  | 037-040 | 7200K            |
|    |  |  | 041-045 | 7100K            |
|    |  |  | 046-049 | 7000K            |
|    |  |  | 050-054 | 6900K            |
|    |  |  | 055-058 | 6800K            |
|    |  |  | 059-063 | 6700K            |
|    |  |  | 064-067 | 6600K            |
|    |  |  | 068-072 | 6500K            |
|    |  |  | 073-076 | 6400K            |
|    |  |  | 077-081 | 6300K            |
|    |  |  | 082-085 | 6200K            |
|    |  |  | 086-090 | 6100K            |
|    |  |  | 091-094 | 6000K            |
|    |  |  | 095-099 | 5900K            |
|    |  |  | 100-103 | 5800K            |
|    |  |  | 104-108 | 5700K            |
|    |  |  | 109-112 | 5600K            |
|    |  |  | 113-117 | 5500K            |
|    |  |  | 118-121 | 5400K            |
|    |  |  | 122-126 | 5300K            |
|    |  |  | 127-130 | 5200K            |
|    |  |  | 131-135 | 5100K            |
|    |  |  | 136-139 | 5000K            |
|    |  |  | 140-144 | 4900K            |
|    |  |  | 145-148 | 4800K            |
|    |  |  | 149-153 | 4700K            |
|    |  |  | 154-157 | 4600K            |
|    |  |  | 158-162 | 4500K            |
|    |  |  | 163-166 | 4400K            |
|    |  |  | 167-171 | 4300K            |
|    |  |  | 172-175 | 4200K            |
|    |  |  | 176-180 | 4100K            |
|    |  |  | 181-184 | 4000K            |
|    |  |  | 185-189 | 3900K            |
|    |  |  | 190-193 | 3800K            |
|    |  |  | 194-198 | 3700K            |

|    |  |  |         |                           |
|----|--|--|---------|---------------------------|
|    |  |  | 199-202 | 3600K                     |
|    |  |  | 203-207 | 3500K                     |
|    |  |  | 208-211 | 3400K                     |
|    |  |  | 212-216 | 3300K                     |
|    |  |  | 217-220 | 3200K                     |
|    |  |  | 221-225 | 3100K                     |
|    |  |  | 226-229 | 3000K                     |
|    |  |  | 230-234 | 2900K                     |
|    |  |  | 235-238 | 2800K                     |
|    |  |  | 239-243 | 2700K                     |
|    |  |  | 244-247 | 2600K                     |
|    |  |  | 248-255 | 2500K                     |
| 25 |  |  |         | <b>WASH COLOR MACRO</b>   |
|    |  |  | 000-007 | Null                      |
|    |  |  | 008-015 | Color 1                   |
|    |  |  | 016-023 | Color 2                   |
|    |  |  | 024-031 | Color 3                   |
|    |  |  | 032-039 | Color 4                   |
|    |  |  | 040-047 | Color 5                   |
|    |  |  | 048-055 | Color 6                   |
|    |  |  | 056-063 | Color 7                   |
|    |  |  | 064-071 | Color 8                   |
|    |  |  | 072-079 | Color 9                   |
|    |  |  | 080-087 | Color 10                  |
|    |  |  | 088-095 | Color 11                  |
|    |  |  | 096-103 | Color 12                  |
|    |  |  | 104-111 | Color 13                  |
|    |  |  | 112-119 | Color 14                  |
|    |  |  | 120-127 | Color 15                  |
|    |  |  | 128-135 | Color 16                  |
|    |  |  | 136-143 | Color 17                  |
|    |  |  | 144-151 | Color 18                  |
|    |  |  | 152-159 | Color 19                  |
|    |  |  | 160-167 | Color 20                  |
|    |  |  | 168-175 | Color 21                  |
|    |  |  | 176-183 | Color 22                  |
|    |  |  | 184-191 | Color 23                  |
|    |  |  | 192-199 | Color 24                  |
|    |  |  | 200-207 | Color 25                  |
|    |  |  | 208-215 | Color 26                  |
|    |  |  | 216-223 | Color 27                  |
|    |  |  | 224-231 | Color 28                  |
|    |  |  | 232-239 | Color 29                  |
|    |  |  | 240-247 | Color 30                  |
|    |  |  | 248-255 | Color 31                  |
| 26 |  |  |         | <b>WASH EFFECT SELECT</b> |
|    |  |  | 000-007 | Null                      |

|    |    |                                       |                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----|----|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |    |                                       | 008-015<br>016-023<br>024-031<br>032-039<br>040-047<br>048-055<br>056-063<br>064-071<br>072-079<br>080-087<br>088-095<br>096-103<br>104-111<br>112-119<br>120-127<br>128-135<br>136-143<br>144-151<br>152-159<br>160-167<br>168-175<br>176-183<br>184-191<br>192-199<br>200-207<br>208-215<br>216-223<br>224-229<br>230-237<br>238-245<br>246-255 | Ring 1 (outer ring)<br>Ring 2 (inner ring)<br>Built-in Effect 1<br>Built-in Effect 2<br>Built-in Effect 3<br>Built-in Effect 4<br>Built-in Effect 5<br>Built-in Effect 6<br>Built-in Effect 7<br>Built-in Effect 8<br>Built-in Effect 9<br>Built-in Effect 10<br>Built-in Effect 11<br>Built-in Effect 12<br>Built-in Effect 13<br>Built-in Effect 14<br>Built-in Effect 15<br>Built-in Effect 16<br>Built-in Effect 17<br>Built-in Effect 18<br>Built-in Effect 19<br>Built-in Effect 20<br>Built-in Effect 21<br>Built-in Effect 22<br>Built-in Effect 23<br>Built-in Effect 24<br>Built-in Effect 25<br>Built-in Effect 26<br>Rainbow 1 (inner ring)<br>Rainbow 2 (outer ring)<br>Rainbow 3 (inner ring + outer ring) |
| 27 |    |                                       | 000<br>001-127<br>128<br>129-255                                                                                                                                                                                                                                                                                                                  | <b>WASH EFFECT SPEED</b><br>Null<br>Slow to Fast without Fade<br>Null<br>Slow to Fast with Fade                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|    |    | <b>19+ ch (Controlled by Art-Net)</b> |                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|    | 20 | 1                                     | 000-255                                                                                                                                                                                                                                                                                                                                           | <b>WASH RED 1</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|    | 21 | 2                                     | 000-255                                                                                                                                                                                                                                                                                                                                           | <b>WASH GREEN 1</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|    | 22 | 3                                     | 000-255                                                                                                                                                                                                                                                                                                                                           | <b>WASH BLUE 1</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|    | 23 | 4                                     | 000-255                                                                                                                                                                                                                                                                                                                                           | <b>WASH WHITE 1</b><br>0%→100%                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|    | 24 | 5                                     |                                                                                                                                                                                                                                                                                                                                                   | <b>WASH RED 2</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

|  |    |    |         |                                |
|--|----|----|---------|--------------------------------|
|  |    |    | 000-255 | 0%→100%                        |
|  | 25 | 6  | 000-255 | <b>WASH GREEN 2</b><br>0%→100% |
|  | 26 | 7  | 000-255 | <b>WASH BLUE 2</b><br>0%→100%  |
|  | 27 | 8  | 000-255 | <b>WASH WHITE 2</b><br>0%→100% |
|  | 28 | 9  | 000-255 | <b>WASH RED 3</b><br>0%→100%   |
|  | 29 | 10 | 000-255 | <b>WASH GREEN 3</b><br>0%→100% |
|  | 30 | 11 | 000-255 | <b>WASH BLUE 3</b><br>0%→100%  |
|  | 31 | 12 | 000-255 | <b>WASH WHITE 3</b><br>0%→100% |
|  | 32 | 13 | 000-255 | <b>WASH RED 4</b><br>0%→100%   |
|  | 33 | 14 | 000-255 | <b>WASH GREEN 4</b><br>0%→100% |
|  | 34 | 15 | 000-255 | <b>WASH BLUE 4</b><br>0%→100%  |
|  | 35 | 16 | 000-255 | <b>WASH WHITE 4</b><br>0%→100% |
|  | 36 | 17 | 000-255 | <b>WASH RED 5</b><br>0%→100%   |
|  | 37 | 18 | 000-255 | <b>WASH GREEN 5</b><br>0%→100% |
|  | 38 | 19 | 000-255 | <b>WASH BLUE 5</b><br>0%→100%  |
|  | 39 | 20 | 000-255 | <b>WASH WHITE 5</b><br>0%→100% |
|  | 40 | 21 | 000-255 | <b>WASH RED 6</b><br>0%→100%   |
|  | 41 | 22 | 000-255 | <b>WASH GREEN 6</b><br>0%→100% |
|  | 42 | 23 | 000-255 | <b>WASH BLUE 6</b><br>0%→100%  |
|  | 43 | 24 | 000-255 | <b>WASH WHITE 6</b><br>0%→100% |
|  | 44 | 25 | 000-255 | <b>WASH RED 7</b><br>0%→100%   |
|  | 45 | 26 | 000-255 | <b>WASH GREEN 7</b><br>0%→100% |

|  |    |    |         |                                 |
|--|----|----|---------|---------------------------------|
|  | 46 | 27 | 000-255 | <b>WASH BLUE 7</b><br>0%→100%   |
|  | 47 | 28 | 000-255 | <b>WASH WHITE 7</b><br>0%→100%  |
|  | 48 | 29 | 000-255 | <b>WASH RED 8</b><br>0%→100%    |
|  | 49 | 30 | 000-255 | <b>WASH GREEN 8</b><br>0%→100%  |
|  | 50 | 31 | 000-255 | <b>WASH BLUE 8</b><br>0%→100%   |
|  | 51 | 32 | 000-255 | <b>WASH WHITE 8</b><br>0%→100%  |
|  | 52 | 33 | 000-255 | <b>WASH RED 9</b><br>0%→100%    |
|  | 53 | 34 | 000-255 | <b>WASH GREEN 9</b><br>0%→100%  |
|  | 54 | 35 | 000-255 | <b>WASH BLUE 9</b><br>0%→100%   |
|  | 55 | 36 | 000-255 | <b>WASH WHITE 9</b><br>0%→100%  |
|  | 56 | 37 | 000-255 | <b>WASH RED 10</b><br>0%→100%   |
|  | 57 | 38 | 000-255 | <b>WASH GREEN 10</b><br>0%→100% |
|  | 58 | 39 | 000-255 | <b>WASH BLUE 10</b><br>0%→100%  |
|  | 59 | 40 | 000-255 | <b>WASH WHITE 10</b><br>0%→100% |
|  | 60 | 41 | 000-255 | <b>WASH RED 11</b><br>0%→100%   |
|  | 61 | 42 | 000-255 | <b>WASH GREEN 11</b><br>0%→100% |
|  | 62 | 43 | 000-255 | <b>WASH BLUE 11</b><br>0%→100%  |
|  | 63 | 44 | 000-255 | <b>WASH WHITE 11</b><br>0%→100% |
|  | 64 | 45 | 000-255 | <b>WASH RED 12</b><br>0%→100%   |
|  | 65 | 46 | 000-255 | <b>WASH GREEN 12</b><br>0%→100% |
|  | 66 | 47 | 000-255 | <b>WASH BLUE 12</b><br>0%→100%  |
|  | 67 | 48 | 000-255 | <b>WASH WHITE 12</b><br>0%→100% |


|  |    |    |         |                                 |
|--|----|----|---------|---------------------------------|
|  | 68 | 49 | 000-255 | <b>WASH RED 13</b><br>0%→100%   |
|  | 69 | 50 | 000-255 | <b>WASH GREEN 13</b><br>0%→100% |
|  | 70 | 51 | 000-255 | <b>WASH BLUE 13</b><br>0%→100%  |
|  | 71 | 52 | 000-255 | <b>WASH WHITE 13</b><br>0%→100% |
|  | 72 | 53 | 000-255 | <b>WASH RED 14</b><br>0%→100%   |
|  | 73 | 54 | 000-255 | <b>WASH GREEN 14</b><br>0%→100% |
|  | 74 | 55 | 000-255 | <b>WASH BLUE 14</b><br>0%→100%  |
|  | 75 | 56 | 000-255 | <b>WASH WHITE 14</b><br>0%→100% |
|  | 76 | 57 | 000-255 | <b>WASH RED 15</b><br>0%→100%   |
|  | 77 | 58 | 000-255 | <b>WASH GREEN 15</b><br>0%→100% |
|  | 78 | 59 | 000-255 | <b>WASH BLUE 15</b><br>0%→100%  |
|  | 79 | 60 | 000-255 | <b>WASH WHITE 15</b><br>0%→100% |
|  | 80 | 61 | 000-255 | <b>WASH RED 16</b><br>0%→100%   |
|  | 81 | 62 | 000-255 | <b>WASH GREEN 16</b><br>0%→100% |
|  | 82 | 63 | 000-255 | <b>WASH BLUE 16</b><br>0%→100%  |
|  | 83 | 64 | 000-255 | <b>WASH WHITE 16</b><br>0%→100% |
|  | 84 | 65 | 000-255 | <b>WASH RED 17</b><br>0%→100%   |
|  | 85 | 66 | 000-255 | <b>WASH GREEN 17</b><br>0%→100% |
|  | 86 | 67 | 000-255 | <b>WASH BLUE 17</b><br>0%→100%  |
|  | 87 | 68 | 000-255 | <b>WASH WHITE 17</b><br>0%→100% |
|  | 88 | 69 | 000-255 | <b>WASH RED 18</b><br>0%→100%   |
|  | 89 | 70 | 000-255 | <b>WASH GREEN 18</b><br>0%→100% |

|  |     |    |         |                                 |
|--|-----|----|---------|---------------------------------|
|  | 90  | 71 | 000-255 | <b>WASH BLUE 18</b><br>0%→100%  |
|  | 91  | 72 | 000-255 | <b>WASH WHITE 18</b><br>0%→100% |
|  | 92  | 73 | 000-255 | <b>WASH RED 19</b><br>0%→100%   |
|  | 93  | 74 | 000-255 | <b>WASH GREEN 19</b><br>0%→100% |
|  | 94  | 75 | 000-255 | <b>WASH BLUE 19</b><br>0%→100%  |
|  | 95  | 76 | 000-255 | <b>WASH WHITE 19</b><br>0%→100% |
|  | 96  | 77 | 000-255 | <b>WASH RED 20</b><br>0%→100%   |
|  | 97  | 78 | 000-255 | <b>WASH GREEN 20</b><br>0%→100% |
|  | 98  | 79 | 000-255 | <b>WASH BLUE 20</b><br>0%→100%  |
|  | 99  | 80 | 000-255 | <b>WASH WHITE 20</b><br>0%→100% |
|  | 100 | 81 | 000-255 | <b>WASH RED 21</b><br>0%→100%   |
|  | 101 | 82 | 000-255 | <b>WASH GREEN 21</b><br>0%→100% |
|  | 102 | 83 | 000-255 | <b>WASH BLUE 21</b><br>0%→100%  |
|  | 103 | 84 | 000-255 | <b>WASH WHITE 21</b><br>0%→100% |
|  | 104 | 85 | 000-255 | <b>WASH RED 22</b><br>0%→100%   |
|  | 105 | 86 | 000-255 | <b>WASH GREEN 22</b><br>0%→100% |
|  | 106 | 87 | 000-255 | <b>WASH BLUE 22</b><br>0%→100%  |
|  | 107 | 88 | 000-255 | <b>WASH WHITE 22</b><br>0%→100% |
|  | 108 | 89 | 000-255 | <b>WASH RED 23</b><br>0%→100%   |
|  | 109 | 90 | 000-255 | <b>WASH GREEN 23</b><br>0%→100% |
|  | 110 | 91 | 000-255 | <b>WASH BLUE 23</b><br>0%→100%  |
|  | 111 | 92 | 000-255 | <b>WASH WHITE 23</b><br>0%→100% |

|  |     |     |         |                          |
|--|-----|-----|---------|--------------------------|
|  | 112 | 93  | 000-255 | WASH RED 24<br>0%→100%   |
|  | 113 | 94  | 000-255 | WASH GREEN 24<br>0%→100% |
|  | 114 | 95  | 000-255 | WASH BLUE 24<br>0%→100%  |
|  | 115 | 96  | 000-255 | WASH WHITE 24<br>0%→100% |
|  | 116 | 97  | 000-255 | WASH RED 25<br>0%→100%   |
|  | 117 | 98  | 000-255 | WASH GREEN 25<br>0%→100% |
|  | 118 | 99  | 000-255 | WASH BLUE 25<br>0%→100%  |
|  | 119 | 100 | 000-255 | WASH WHITE 25<br>0%→100% |
|  | 120 | 101 | 000-255 | WASH RED 26<br>0%→100%   |
|  | 121 | 102 | 000-255 | WASH GREEN 26<br>0%→100% |
|  | 122 | 103 | 000-255 | WASH BLUE 26<br>0%→100%  |
|  | 123 | 104 | 000-255 | WASH WHITE 26<br>0%→100% |
|  | 124 | 105 | 000-255 | WASH RED 27<br>0%→100%   |
|  | 125 | 106 | 000-255 | WASH GREEN 27<br>0%→100% |
|  | 126 | 107 | 000-255 | WASH BLUE 27<br>0%→100%  |
|  | 127 | 108 | 000-255 | WASH WHITE 27<br>0%→100% |
|  | 128 | 109 | 000-255 | WASH RED 28<br>0%→100%   |
|  | 129 | 110 | 000-255 | WASH GREEN 28<br>0%→100% |
|  | 130 | 111 | 000-255 | WASH BLUE 28<br>0%→100%  |
|  | 131 | 112 | 000-255 | WASH WHITE 28<br>0%→100% |
|  | 132 | 113 | 000-255 | WASH RED 29<br>0%→100%   |
|  | 133 | 114 | 000-255 | WASH GREEN 29<br>0%→100% |

|  |     |     |         |                                 |
|--|-----|-----|---------|---------------------------------|
|  | 134 | 115 | 000-255 | <b>WASH BLUE 29</b><br>0%→100%  |
|  | 135 | 116 | 000-255 | <b>WASH WHITE 29</b><br>0%→100% |
|  | 136 | 117 | 000-255 | <b>WASH RED 30</b><br>0%→100%   |
|  | 137 | 118 | 000-255 | <b>WASH GREEN 30</b><br>0%→100% |
|  | 138 | 119 | 000-255 | <b>WASH BLUE 30</b><br>0%→100%  |
|  | 139 | 120 | 000-255 | <b>WASH WHITE 30</b><br>0%→100% |

**LED PIXEL ZONES:**

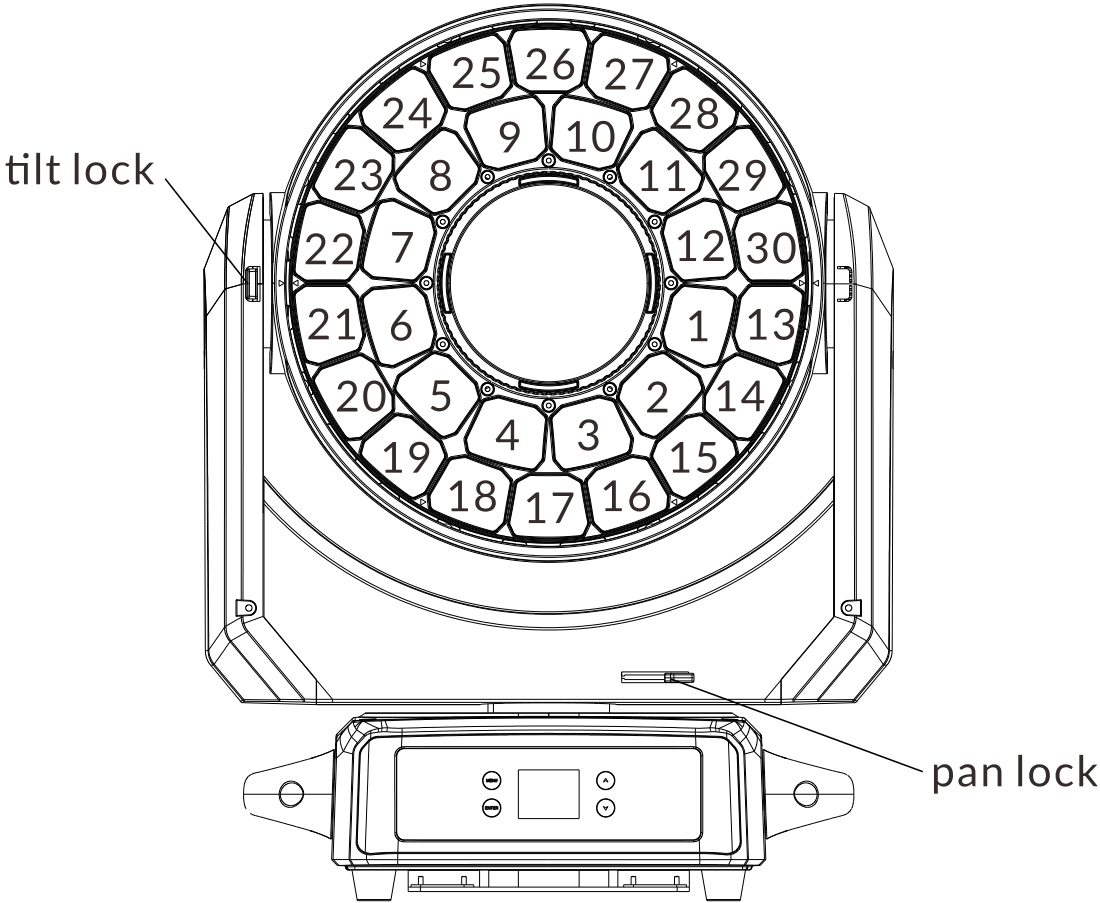

## 08/ Error Information

Error codes are shown continuously in the display when the fixture fails and they will not disappear until the fixture is repaired.

### CPU-B/C/D/E/F/G/H/I/J Error

Check whether the 485 (DATA) leads on the PCB board are installed in place or disconnected.

Check whether the related 485 (DATA) signal circuit on the PCB board is damaged.

### Network Error

Check whether the net model is installed in place.

Check whether the net model is damaged.

Check whether the network is normal.

### Color Cal Err

Check if the color calibration IC is damaged.

Check whether the color calibration IC board is inserted well and whether the electronic components are well soldered.

Check if the motherboard is malfunctioning.

Check whether the R76 bit resistors and other components on the motherboard are well soldered.

### Led Temp. 1/2/3/4 Error

Check whether the temperature detecting board is normal.

Check whether the components of the temperature detecting board are damaged.

Check whether the lead on the temperature detecting board is installed in place or disconnected.

### LED Timeout Use

### **Wash Too Hot Off**

When leds' temperature reaches 83°C, they will automatically turn off to protect the fixture.

### **Beam Too Hot Off**

When the beam temperature reaches 75°C, it will automatically turn off to protect the fixture.

### **Pan Reset Error**

Check whether the position of the pan where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the pan operating range.

Check whether the Hall element on the pan is damaged.

Check whether the lead connecting the Hall element on the pan and the PCB board is in poor contact or disconnected.

Check whether the motor on the pan is damaged.

Check whether the related circuit of the motor drive board on the pan is damage.

### **Pan Encode Error**

Check whether the encoder on the pan is damaged.

Check whether the lead connecting the encoder on the pan and the PCB board is in poor contact or disconnected.

### **Pan Encode No Find**

Check whether the lead connecting the encoder on the pan and the PCB board is in poor contact or disconnected.

### **Pan Encode Disable**

Check whether the encoder on the pan is damaged.

### **Tilt Reset Error**

Check whether the position of the tilt where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the tilt operating range.

Check whether the Hall element on the tilt is damaged.

Check whether the lead connecting the Hall element on the tilt and the PCB board is in poor contact or disconnected.

Check whether the motor on the tilt is damaged.

Check whether the related circuit of the motor drive board on the tilt is damage.

### **Tilt Encode Error**

Check whether the encoder on the tilt is damaged.

Check whether the lead connecting the encoder on the tilt and the PCB board is in poor contact or disconnected.

### **Tilt Encode No Find**

Check whether the lead connecting the encoder on the tilt and the PCB board is in poor contact or disconnected.

### **Tilt Encode Disable**

Check whether the encoder on the tilt is damaged.

## Color Reset Error

Check whether the position of the color wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the color wheel operating range.

Check whether the Hall element on the color wheel is damaged.

Check whether the lead connecting the Hall element on the color wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the color wheel is damaged.

Check whether the related circuit of the motor drive board on the color wheel is damage.

## Gobo Reset Error

Check whether the position of the gobo wheel where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the gobo wheel operating range.

Check whether the Hall element on the gobo wheel is damaged.

Check whether the lead connecting the Hall element on the gobo wheel and the PCB board is in poor contact or disconnected.

Check whether the motor on the gobo wheel is damaged.

Check whether the related circuit of the motor drive board on the gobo wheel is damage.

## 8 Prism/16 Prism Reset Error

Check whether the position of the 8 prism/16 prism where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the 8 prism/16 prism operating range.

Check whether the Hall element on the 8 prism/16 prism is damaged.

Check whether the lead connecting the Hall element on the 8 prism/16 prism and the PCB board is in poor contact or disconnected.

Check whether the motor on the 8 prism/16 prism is damaged.

Check whether the related circuit of the motor drive board on the 8

## 8 R-Prism/16 R-Prism Reset Error

Check whether the position of the 8 prism/16 prism where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the 8 prism/16 prism operating range.

Check whether the Hall element on the 8 prism/16 prism is damaged.

Check whether the lead connecting the Hall element on the 8 prism/16 prism and the PCB board is in poor contact or disconnected.

Check whether the motor on the 8 prism/16 prism is damaged.

Check whether the related circuit of the motor drive board on the 8

## Frost Reset Error

Check whether the position of the frost where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the frost operating range.

Check whether the Hall element on the frost is damaged.

Check whether the lead connecting the Hall element on the frost and the PCB board is in poor contact or disconnected.

Check whether the motor on the frost is damaged.

Check whether the related circuit of the motor drive board on the frost is damage.

## Focus Reset Error

Check whether the position of the focus where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the focus operating range.

Check whether the Hall element on the focus is damaged.

Check whether the lead connecting the Hall element on the focus and the PCB board is in poor contact or disconnected.

Check whether the motor on the focus is damaged.

Check whether the related circuit of the motor drive board on the focus is damage.

## Zoom Reset Error

Check whether the position of the zoom where the magnet is installed falls off or is damaged.

Check whether there are obstacles in the zoom operating range.

Check whether the Hall element on the zoom is damaged.

Check whether the lead connecting the Hall element on the zoom and the PCB board is in poor contact or disconnected.

Check whether the motor on the zoom is damaged.

Check whether the related circuit of the motor drive board on the zoom is damaged.

## BaseFan1/2/3/4 Start Error

Check whether the fan is not running.

Check whether the fan leads are installed in place or disconnected.

Check whether the fan is damaged.

Check whether there are obstacles in the fan operating range.

## HeadFan1/2/3/4/5 Start Error


Check whether the fan is not running.

Check whether the fan leads are installed in place or disconnected.

Check whether the fan is damaged.

Check whether there are obstacles in the fan operating range.

## Position of cooling fans:

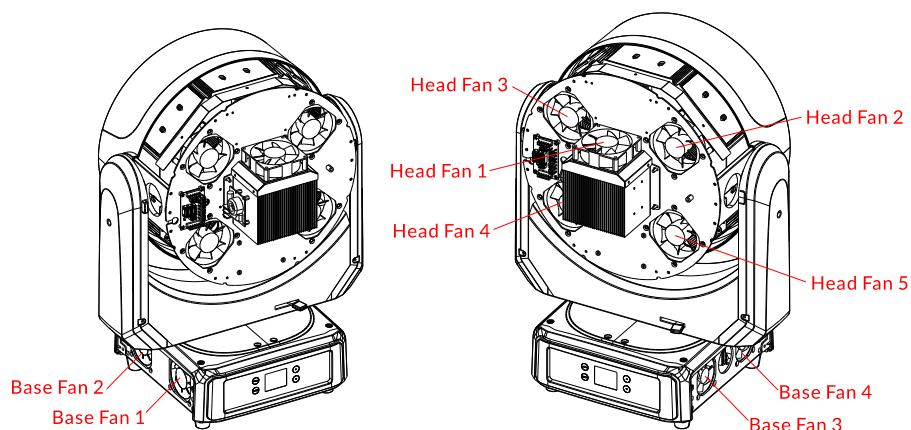

## 09/ Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for troubleshooting:

### A. The unit does not work, no light and the fan does not work

- ▶ Check the connected power.
- ▶ Measure the voltage.
- ▶ Check the power indicator to see whether it can be lit up or not.

### B. Not responding to the DMX controller

- ▶ Check whether the DMX connectors and the DMX cables are connected correctly.
- ▶ Check whether the DMX address is correctly set.
- ▶ If the intermittent DMX signal problem occurs, check whether the XLR socket and the signal cable are well connected.
- ▶ Try it with another DMX controller.
- ▶ Check whether the DMX cables run near or alongside to the high-voltage cables, which may damage or interfere with the signal circuit.

### C. One of the channels is not working well

- ▶ The stepper motor might be damaged or the cable connected to the PCB might be broken.
- ▶ The motor's drive IC on the PCB might be out of condition.

## 10/ Fixture Cleaning

It is absolutely essential that the fixture is kept clean to ensure the maximum light-output and allow the fixture to function reliably throughout its life. The fixture must be cleaned regularly to avoid dust, dirt and smoke-fluid residues building up on or within the fixture. The cleaning frequency depends on the application environment. Clean the fixture immediately if the dust enters it to avoid damage to the optical lens due to excessive dust.

- ▶ A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should solvents be used.
- ▶ Always dry the parts carefully.
- ▶ Clean the external optical lens at least every 20 days.

### **Declaration of Conformity**

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 2014/30/EU.

EN 55032: 2015+A1: 2020; EN 55035: 2017+A11: 2020;  
EN IEC 61000-3-2: 2019+A1: 2021;  
EN 61000-3-3: 2013+A3: 2021.

**&**

### **Harmonized Standard**

EN IEC 60598-2-17: 2018;  
EN IEC 60598-1: 2021+A11: 2022.  
Safety of household and similar electrical appliances  
Part 1: General requirements and tests

### **Certifications**

cETLus Approved (Control #5000057)



---

[www.acmelighting.com](http://www.acmelighting.com)